



Frontier-S Maintenance Tool **Operation Guide**

Fourth Edition

Copyrights and Trademarks


Copyrights and Trademarks

Microsoft® and Windows® are registered trademarks of Microsoft Corporation.

Apple®, Macintosh®, Mac OS®, and OS X® are registered trademarks of Apple Inc.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners.

Meaning of Symbols

 Important:	Important must be followed to avoid damage to this product.
Note:	Notes contain important information on the operation of this product.

Operating System Versions

In this documentation, the following abbreviations are used.

Windows refers to Windows 10, 8, 7, XP.

- ☐ Windows 10 refers to Windows 10, Windows 10 Pro.
- ☐ Windows 8.1 refers to Windows 8.1, Windows 8.1 Pro.
- ☐ Windows 8 refers to Windows 8, Windows 8 Pro.
- ☐ Windows 7 refers to Windows 7 Professional.
- ☐ Windows XP refers to Windows XP Professional.

Macintosh refers to Mac OS X.

- ☐ Mac OS X refers to Mac OS X 10.5.8/10.6.x/10.7.x/10.8.x/10.9.x/10.10.x.

Contents

Copyrights and Trademarks

Copyrights and Trademarks.	2
Meaning of Symbols.	2
Operating System Versions.	2

Using the Maintenance Tool (Windows)

Summary of the Maintenance Tool.	4
Starting and Closing.	4
List of Functions.	5
Head Maintenance.	7
Using Head Maintenance.	7
Diagnostic Cleaning.	9
Forced Cleaning.	10
Nozzle Check.	12
Paper Settings.	16
Operation Condition Settings.	17
Warning Buzzer.	17
Power Saving.	18
Periodic Nozzle Check.	20
Printer Adjustment.	22
Print Head Alignment.	22
Paper Feed Adjustment.	24
Gray Adjustment.	27
History.	45
Operation History.	45
Collect Logs.	46
Printer Management.	48
Register/Delete Printer.	48
Replace Printer.	49
Spool Folder Settings.	54
Update Paper Information.	56
Troubleshooting.	59
Error Messages.	59
The printer is not replaced automatically.	60
Cannot perform Replace Printer from Maintenance Tool.	61
Cannot perform Register/Delete Printer correctly.	61

Using the Maintenance Tool (Mac OS X)

Summary of the Maintenance Tool.	62
Starting and closing.	62
List of functions.	64
Printer Window.	65

Adjusting the Print Head.	66
Performing Head Maintenance.	66
Nozzle Check.	68
Diagnostic Cleaning.	70
Forced Cleaning.	71
Print Head Alignment.	74
Operation Condition Settings.	78
Time Before Switching to Sleep Mode.	78
Warning Buzzer.	79
Paper Settings.	80
Periodic Nozzle Check.	82
Adding a Printer/Updating Paper Information.	83
Troubleshooting.	85
About error messages.	85

Appendix

Notes.	86
OPEN SOURCE SOFTWARE.	87
END-USER LICENSE AGREEMENT.	95

Index

Using the Maintenance Tool (Windows)

Using the Maintenance Tool (Windows)

Summary of the Maintenance Tool

From your computer you can perform adjustment and maintenance operations such as checking the printer's status, making settings, performing head cleaning and so on.

Starting and Closing

Starting

On your computer, click **Start - All Programs - FUJIFILM DX100 Software - DX Printer Maintenance Tool**.

Windows 10


Click the start button, and then select **All apps - DX Printer Maintenance Tool**.

Windows 8.1/Windows 8

Enter the software name in the search charm, and then select the icon displayed.

Windows 7/Windows XP

Click the start button, and then select **All Programs (or Programs) -FUJIFILM DX100 Software - DX Printer Maintenance Tool**.

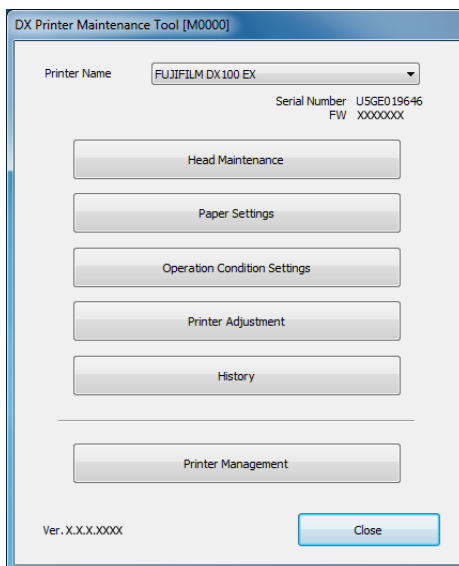
**Note:**

You can also start by clicking **Start DX Printer Maintenance Tool** on the printer driver screen.

Using the Maintenance Tool (Windows)

Closing



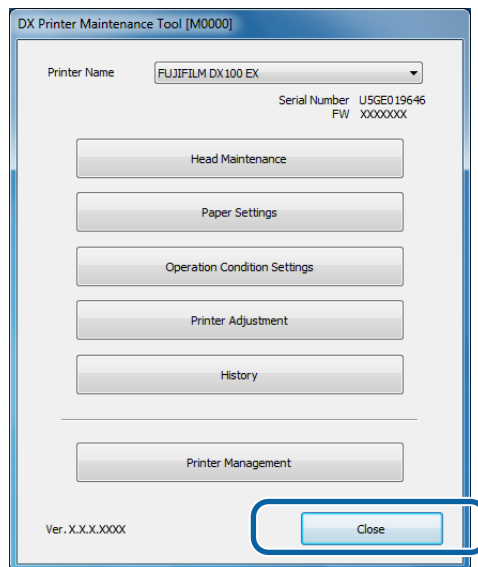








Click **Close**.



List of Functions

Main Screen Menu	Setting Item		Settings
	Large Item	Small Item	
Printer Name	-	-	Select the printer.
Head Maintenance	Diagnostic Cleaning	-	Detects clogged nozzles and automatically performs cleaning. "Diagnostic Cleaning" on page 9
	Forced Cleaning	-	Perform manual cleaning. "Forced Cleaning" on page 10
	Nozzle Check	-	Checks for clogged nozzles. "Nozzle Check" on page 12
Paper Settings	-	-	Set paper information. "Paper Settings" on page 16
Operation Condition Settings	Warning Buzzer	-	Set whether or not to sound the warning buzzer. "Warning Buzzer" on page 17
	Power Saving	-	Set the time to switch to power saving mode. "Power Saving" on page 18
	Periodic Nozzle Check	-	Set whether or not to automatically perform a nozzle check. "Periodic Nozzle Check" on page 20


Using the Maintenance Tool (Windows)

Main Screen Menu	Setting Item		Settings
	Large Item	Small Item	
Printer Adjustment	Print Head Alignment	-	Corrects the print misalignment.  "Print Head Alignment" on page 22
	Paper Feed Adjustment	-	Adjusts the amount of paper feed.  "Paper Feed Adjustment" on page 24
	Gray Adjustment	Color Balance	Adjusts the color balance.  "Color Balance" on page 29
		Density	Adjusts the density (darker/lighter).  "Density" on page 33
		Gradation	Adjusts the gradation (difference between light and dark).  "Gradation" on page 38
History	Operation History	-	Allows you to check errors and the number of copies printed.  "Operation History" on page 45
	Collect Logs	-	Saves log files.  "Collect Logs" on page 46
Printer Management	Register/Delete Printer	-	Registers or deletes the printer.  "Register/Delete Printer" on page 48
	Replace Printer	-	Replaces the printer.  "Replace Printer" on page 49
	Spool Folder Settings	-	Changes the folder that temporarily stores the spooled data for printing.  "Spool Folder Settings" on page 54
	Update Paper Information	-	Registers a paper type file to the printer.  "Update Paper Information" on page 56

Using the Maintenance Tool (Windows)

Head Maintenance




In **Head Maintenance** you can perform printer maintenance operations such as **Diagnostic Cleaning**, **Forced Cleaning**, and **Nozzle Check**.

Before performing **Head Maintenance**, make sure that the printer's  light is on.

Using Head Maintenance

This function checks for clogging in the print head, and clears the clogging if any is detected. If the nozzles are clogged, stripes may appear in the print outs, and the colors may differ from the standard, expected colors. If this does occur, use **Head Maintenance** to clear the problem by following the workflow on the next page.


The following three functions are available in **Head Maintenance**.

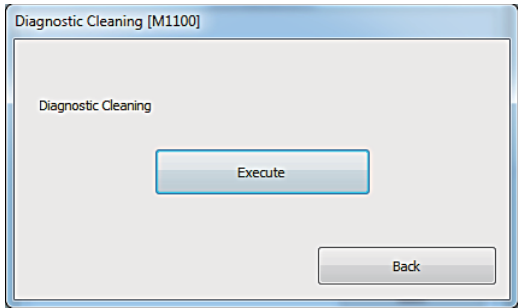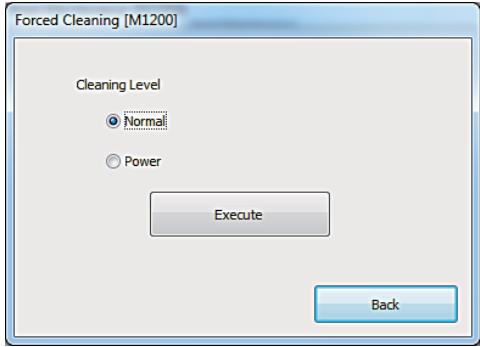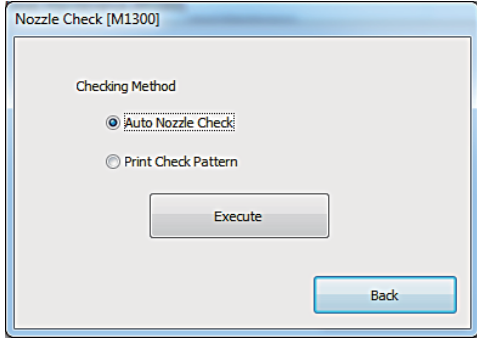Diagnostic Cleaning	Detects clogged nozzles and automatically performs head cleaning.	
Forced Cleaning	Perform manual head cleaning.	
Nozzle Check	Checks for clogged nozzles.	

Using the Maintenance Tool (Windows)

- 1** There are problems with the print outs such as stripes appearing or a variation in the colors.

<Print example>

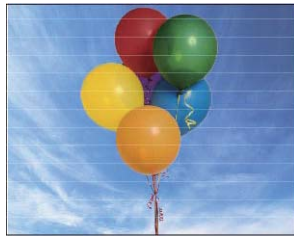

- 2** Perform **Diagnostic Cleaning**.

When the message "Diagnostic cleaning completed." is displayed

-> Cleaning is complete.

When the message "Diagnostic cleaning is finished. Clogged nozzles detected. Perform diagnostic cleaning again. If the clogged nozzles are not cleared after performing diagnostic cleaning three times, perform [Forced Cleaning] set to [Power]." is displayed

-> Perform **Diagnostic Cleaning** again.

If the nozzles remain clogged after repeating this procedure three times, go to the next step.



- 3** Perform **Power** from **Forced Cleaning**, and then perform **Print Check Pattern**.

When there are no problems in the printed check pattern

-> Cleaning is complete.


When there are problems in the printed check pattern

-> Contact service support.

Using the Maintenance Tool (Windows)


Diagnostic Cleaning

- 1 Click **Head Maintenance** on the main screen.

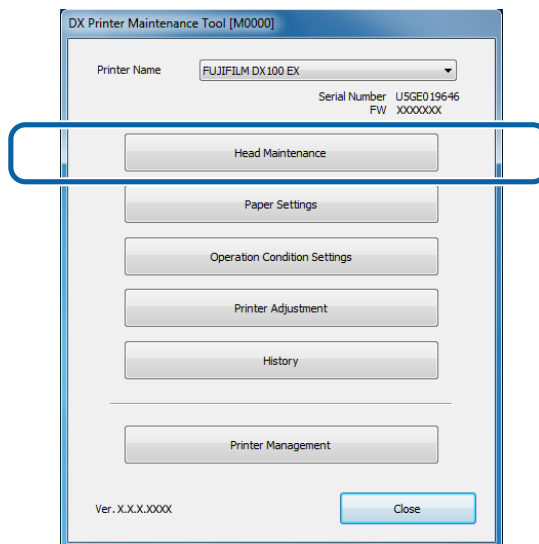


The **Head Maintenance** screen is displayed.

- 2 Click **Diagnostic Cleaning**.

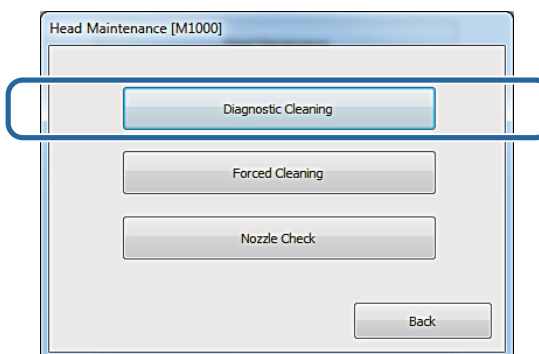

The **Diagnostic Cleaning** screen is displayed.

- 3 Click **Execute**.

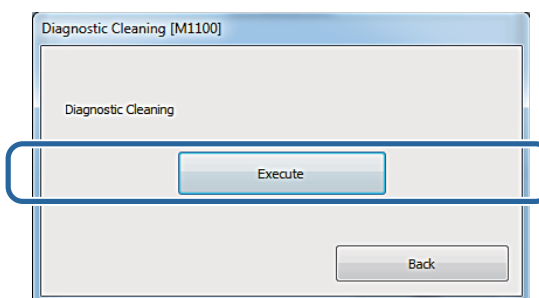

The nozzle check starts. Perform cleaning if necessary.

Depending on the condition of the nozzles, the time required may differ.

Using the Maintenance Tool (Windows)

4

Check the results of Diagnostic Cleaning in the message displayed on the screen.

When the message "Diagnostic cleaning completed." is displayed, cleaning is complete.

When the message "Diagnostic cleaning finished. Clogged nozzles detected. Perform diagnostic cleaning again." is displayed, perform **Diagnostic Cleaning** again.

When the message "Auto nozzle check failed." is displayed, contact service support.


If the clogged nozzles are not cleared after performing **Diagnostic Cleaning** three times, perform Forced Cleaning set to **Power**. If the nozzles are still clogged even after performing **Power** cleaning, contact service support.

 ["Forced Cleaning" on page 10](#)

Forced Cleaning

1


Click **Head Maintenance** on the main screen.

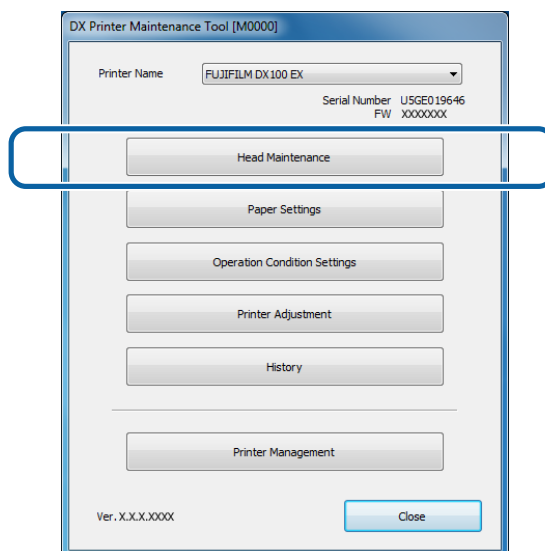

The **Head Maintenance** screen is displayed.

2


Click **Forced Cleaning**.

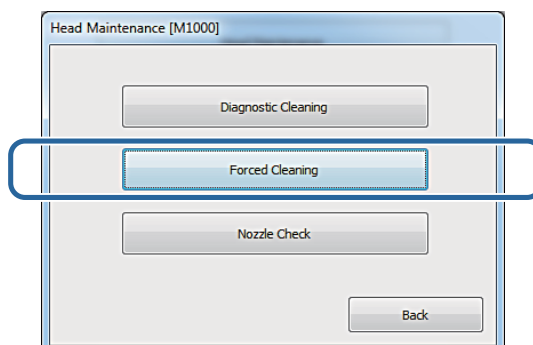

The **Forced Cleaning** screen is displayed.


Using the Maintenance Tool (Windows)

3 Select the **Cleaning Level**.

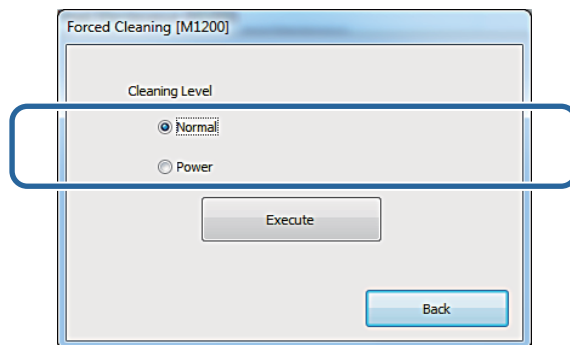

Item	Explanation
Normal	The surface of the head is cleaned and clogged nozzles are cleared.
Power	Performs a more powerful cleaning than Normal cleaning. Use this setting if the nozzles are still clogged even after repeating Normal cleaning several times. Power consumes more ink than Normal cleaning. If a message is displayed informing you that there is not enough ink remaining, replace the Ink cartridge before continuing.

4 Click **Execute**.

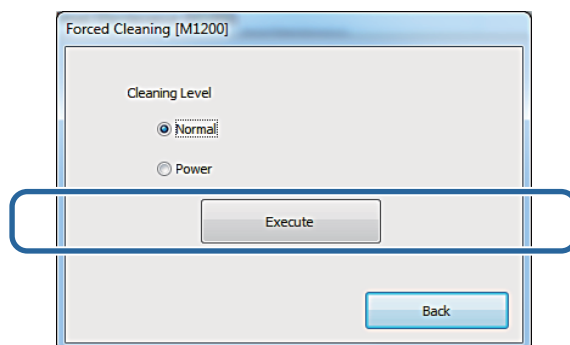

Cleaning is performed.

Depending on the **Cleaning Level**, the time required may differ.

5 Check the Head Cleaning results.

Check the condition of the nozzles in **Nozzle Check**.

 [“Nozzle Check” on page 12](#)

If the nozzles are clogged, return to step 3.

Perform Normal cleaning. If the nozzles are still clogged even after repeating Normal several times, perform Power cleaning.

If the nozzles are still clogged even after performing Power cleaning, contact service support.

Using the Maintenance Tool (Windows)


Nozzle Check

The **Nozzle Check** function checks if the print head nozzles are clogged. The printer uses the **Auto Nozzle Check** function to automatically check for clogged nozzles, and then **Print Check Pattern** prints a check pattern for a visual confirmation.

After the nozzle check, perform **Forced Cleaning** if necessary.


Auto Nozzle Check

- 1 Click **Head Maintenance** on the main screen.

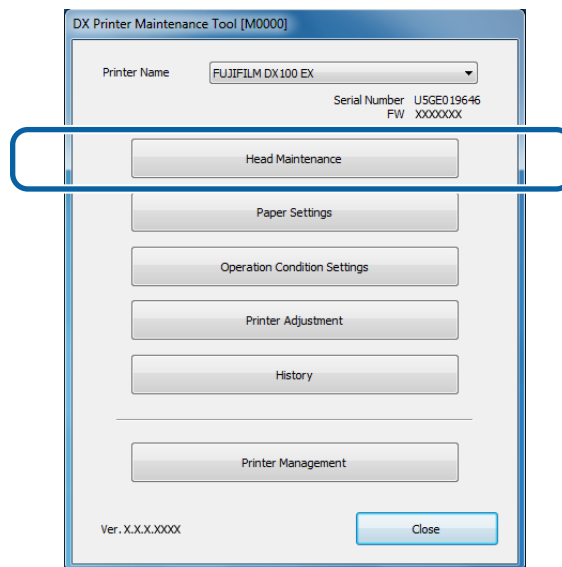

The **Head Maintenance** screen is displayed.


- 2 Click **Nozzle Check**.

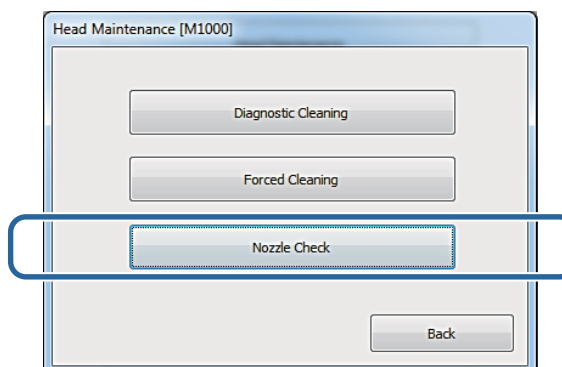


The **Nozzle Check** screen is displayed.

Using the Maintenance Tool (Windows)

3 Select **Auto Nozzle Check**.

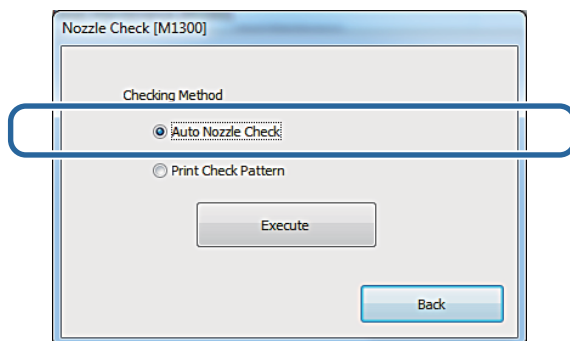

4 Click **Execute**.

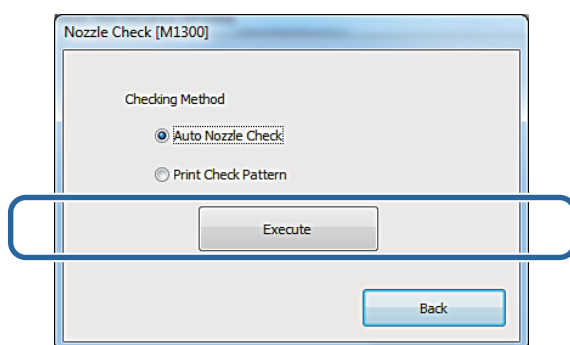

Auto Nozzle Check is performed.

Depending on the condition of the nozzles, this may take some time.

5 Check the results of the nozzle check in the message displayed on the screen.

When "Auto nozzle check is complete." is displayed, the check is complete.

When "Clogged nozzles detected. Perform [Forced Cleaning]." is displayed, perform **Forced Cleaning**.

[🔗 "Forced Cleaning" on page 10](#)


Perform **Print Check Pattern** to check the condition of the nozzles.

[🔗 "Print Check Pattern" on page 14](#)

Using the Maintenance Tool (Windows)


Print Check Pattern

- 1 Click **Head Maintenance** on the main screen.

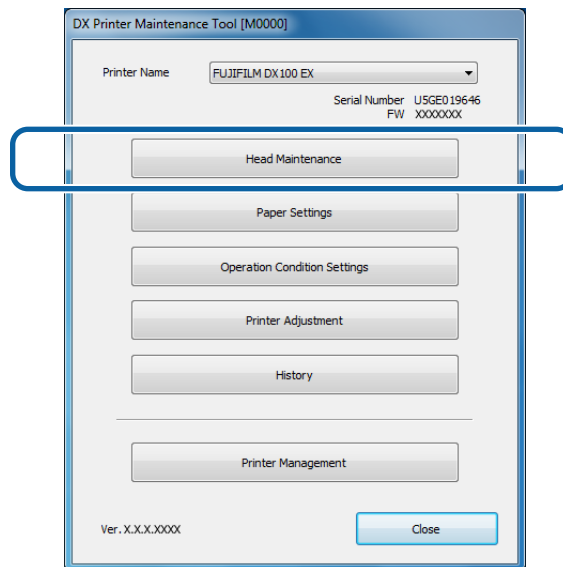


The **Head Maintenance** screen is displayed.

- 2 Click **Nozzle Check**.

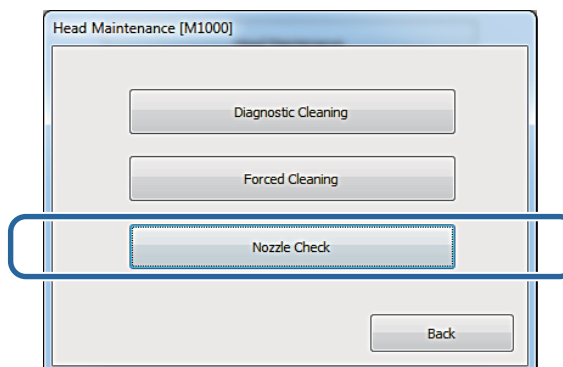


The **Nozzle Check** screen is displayed.

- 3 Select **Print Check Pattern**.

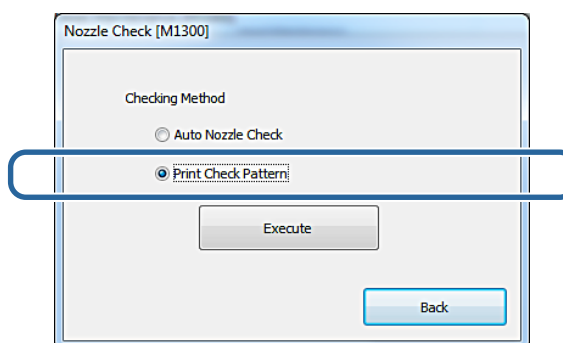

Using the Maintenance Tool (Windows)

- 4** Click **Execute**.

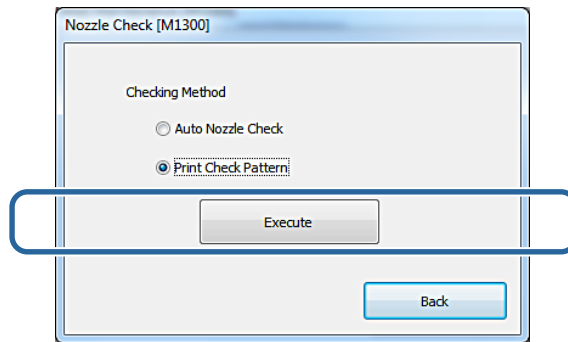


The check pattern is printed.

- 5** Check the print results.


Good example

There are no gaps in the check pattern. The nozzles are not clogged.

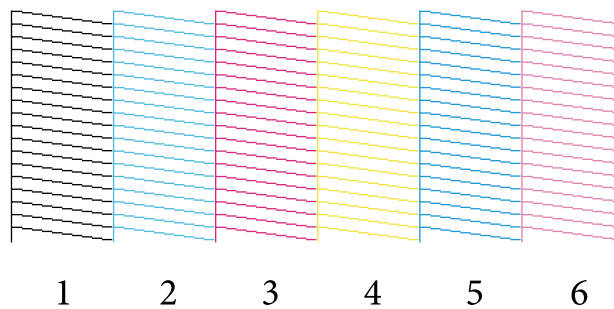

Bad example

There are gaps in the check pattern. Clogged nozzles detected. Perform cleaning.

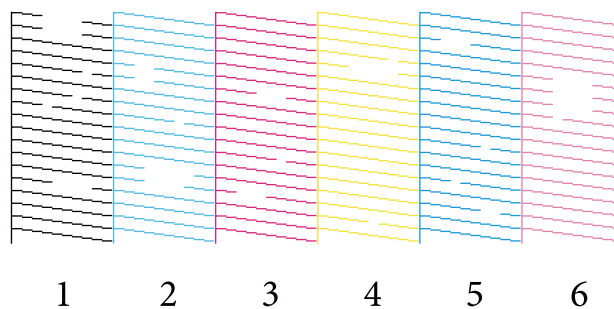

You need to perform head cleaning if there are any gaps in the check patterns.

[🔗 “Forced Cleaning” on page 10](#)


Using the Maintenance Tool (Windows)

Paper Settings

In **Paper Settings**, you can set the **Paper Type** and the **Paper Level**.

Make these settings when you replace the paper.

- 1 Click **Paper Settings** on the main screen.

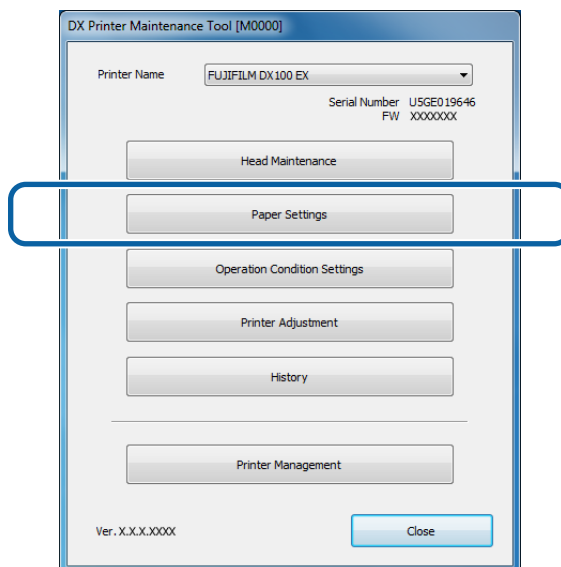

The **Paper Settings** screen is displayed.


Note:

If the **Paper Settings** screen is not displayed, and "Cannot recognize the paper type. Update the paper information." is displayed, update the paper information.

 ["Update Paper Information" on page 56](#)

- 2 Set the **Paper Type** and the **Paper Level**, and then click **Set**.

The paper width set in **Paper Width** is displayed.

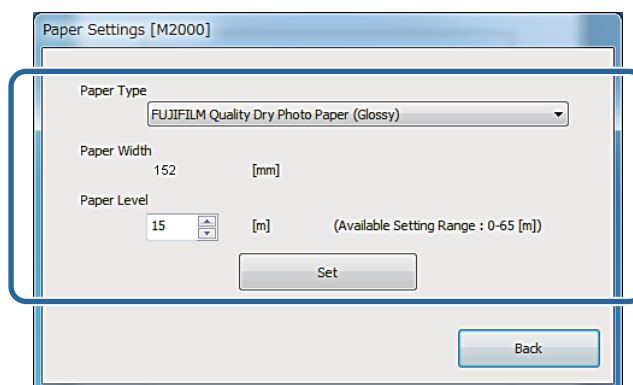

Using the Maintenance Tool (Windows)


Operation Condition Settings

In **Operation Condition Settings**, you can make various printer settings such as **Warning Buzzer** and **Power Saving**.

Warning Buzzer


Set whether or not to sound the warning buzzer.

- 1 Click **Operation Condition Settings** on the main screen.

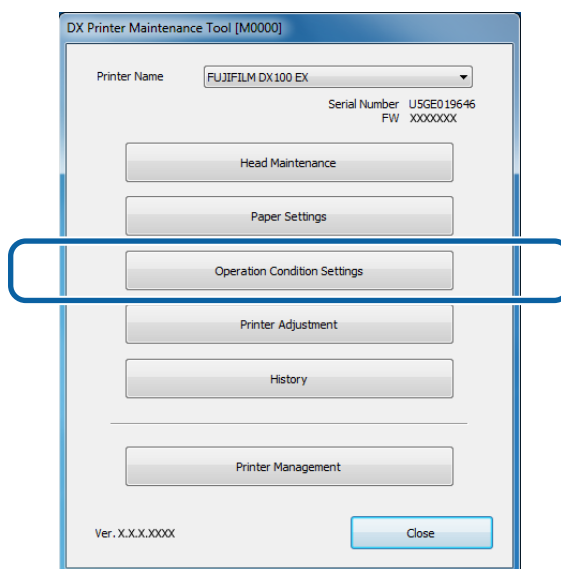

The **Operation Condition Settings** screen is displayed.


- 2 Click **Warning Buzzer**.

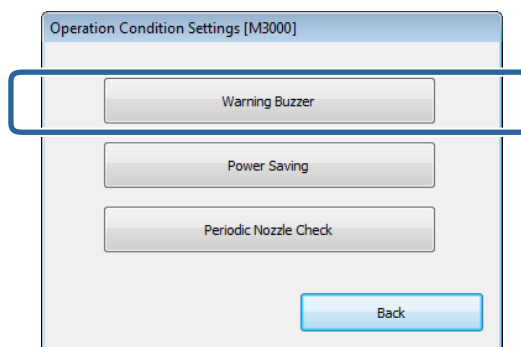

The **Warning Buzzer** screen is displayed.

Using the Maintenance Tool (Windows)

- 3
- Select ON or OFF, and then click Set.

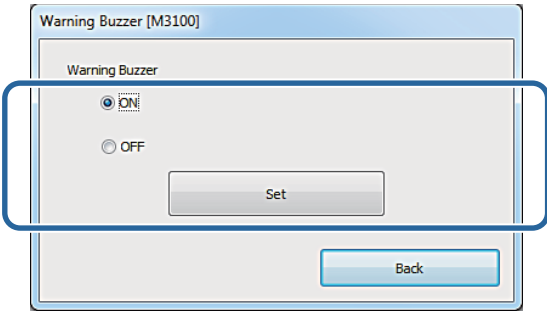


Item	Explanation
ON	The warning buzzer sounds.
OFF	The warning buzzer does not sound.

Power Saving

Set the time before switching to Sleep Mode.

If an error has not occurred on the printer and no print jobs have been received for the specified length of time, the printer automatically switches to Sleep Mode.


- 1
- Click **Operation Condition Settings** on the main screen.

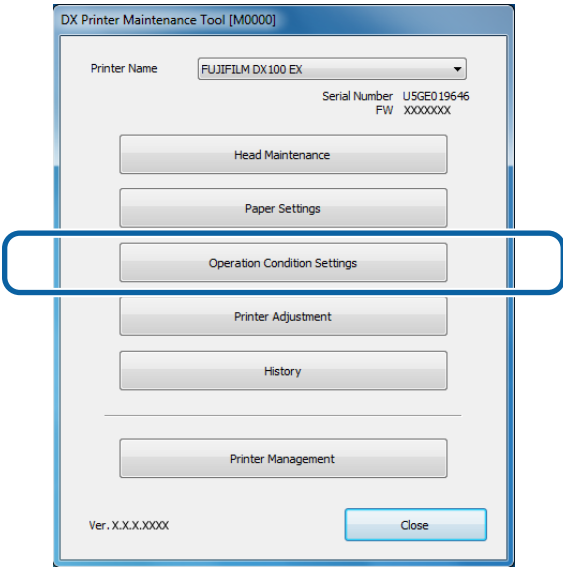

The **Operation Condition Settings** screen is displayed.

Using the Maintenance Tool (Windows)

- 2** Click **Power Saving**.

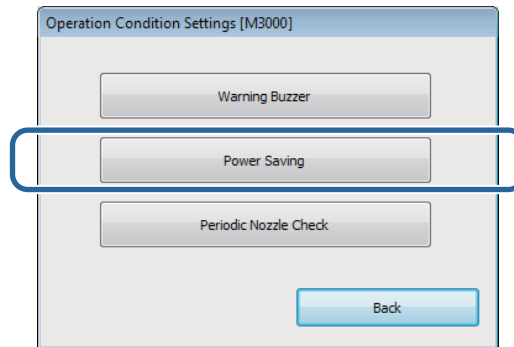


The **Power Saving** screen is displayed.

- 3** Select **Time Before Switching to Sleep Mode**, and then click **Set**.

Once the set time has passed, the printer switches to Sleep Mode.

Settings: 5 mins, 10 mins, 15 mins, 30 mins, 1 hour, 2 hours

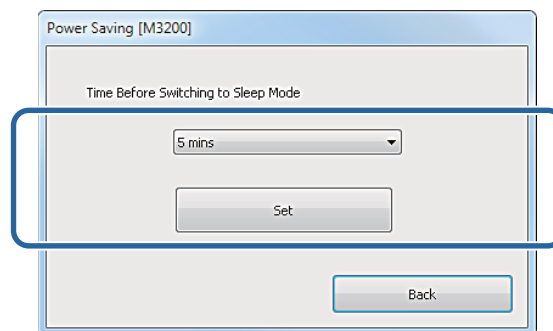


Using the Maintenance Tool (Windows)

Periodic Nozzle Check

Set whether or not to automatically perform a Nozzle Check.


This should normally be selected ON. Select OFF only if you are instructed to do so by a service engineer. If this is selected OFF, it is necessary to check the clogging status manually.

- 1 Click **Operation Condition Settings** on the main screen.

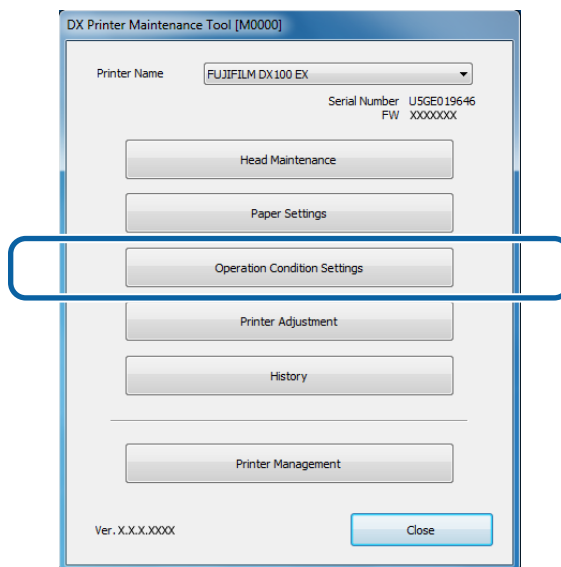

The **Operation Condition Settings** screen is displayed.


- 2 Click **Periodic Nozzle Check**.

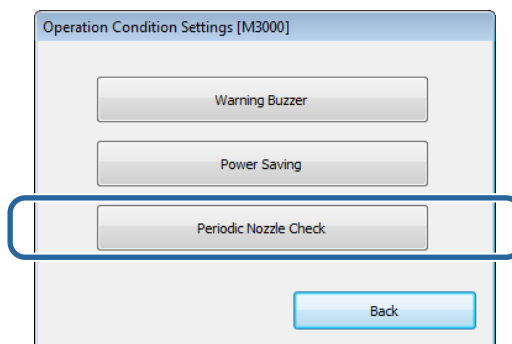

The **Periodic Nozzle Check** screen is displayed.

Using the Maintenance Tool (Windows)

3 Select **ON/OFF**, and then click **Set**.

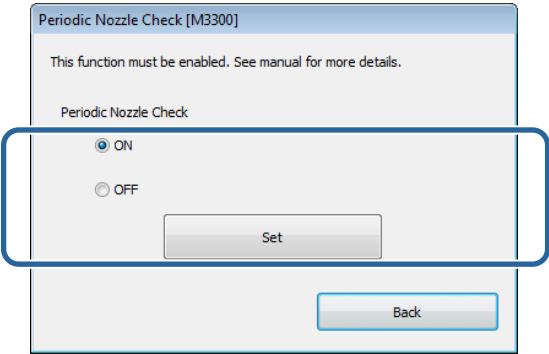

Item	Explanation
ON	Automatically performs Nozzle Check at periodic intervals.
OFF	<div><input type="checkbox"/> Nozzle Check is not performed automatically.</div> <div><input type="checkbox"/> Diagnostic Cleaning and Auto Nozzle Check cannot be performed.</div>

Using the Maintenance Tool (Windows)


Printer Adjustment

In **Printer Adjustment**, you can make printer adjustments such as **Print Head Alignment** and **Gray Adjustment**.

Print Head Alignment


If the print results appear grainy or out of focus, perform print head alignment. The print head alignment function corrects print misalignments.

- 1 Click **Printer Adjustment** on the main screen.

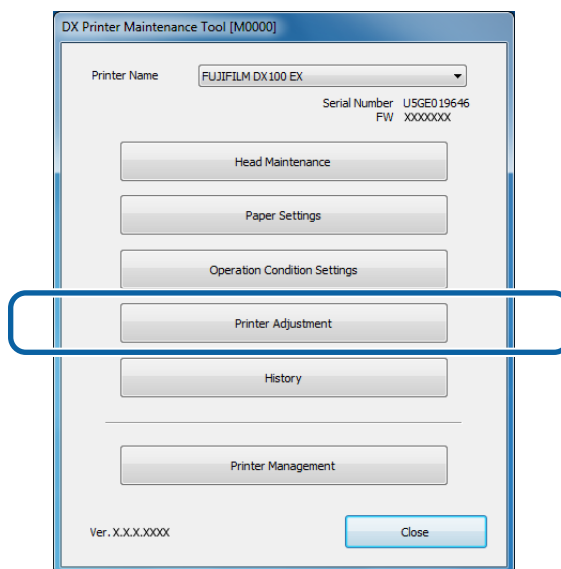

The **Printer Adjustment** screen is displayed.

- 2 Click **Print Head Alignment**.

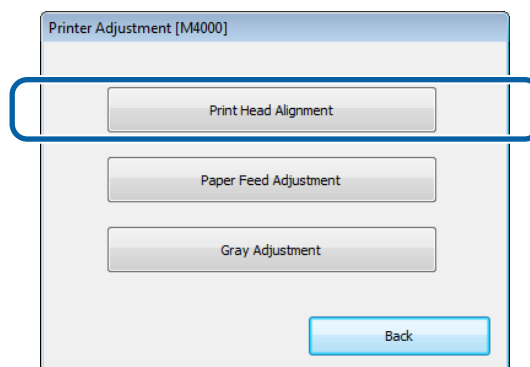


The **Print Head Alignment** screen is displayed.

Using the Maintenance Tool (Windows)

- 3** Check that the paper type displayed matches the paper type for this printer, and then click **Print** from **Adjustment Pattern**.

If the paper type does not match, set the correct paper type in Paper Settings.


🔗 [“Paper Settings” on page 16](#)

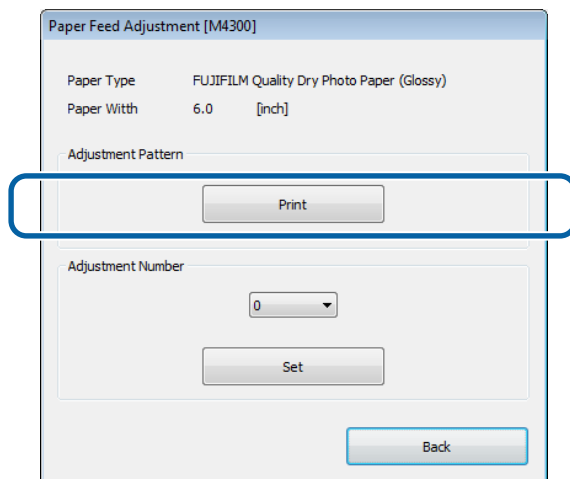


The adjustment pattern is printed.

- 4** Check the print results.

Check for the pattern with the least number of missing lines.

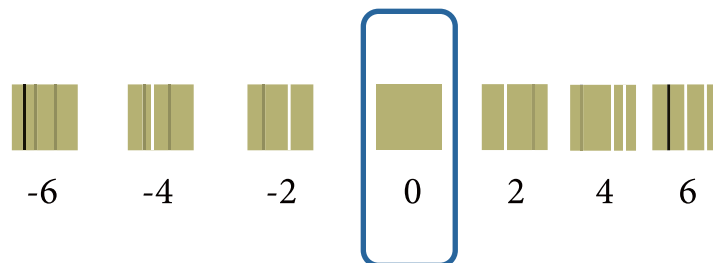

- 5** Select the number for the pattern, and then click **Set**.

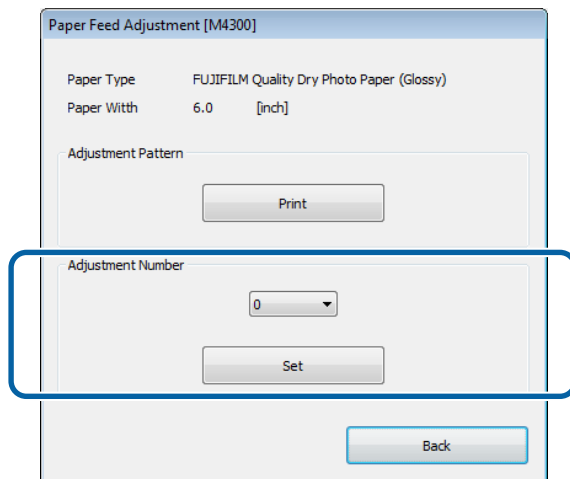


The adjustment number is applied.

Using the Maintenance Tool (Windows)

Paper Feed Adjustment


Paper feed amount errors may occur in the printer due to changes in the surroundings or changes over time. If quality declines, you may be able to improve it by correcting the paper feed amount.

- 1 Click **Printer Adjustment** on the main screen.

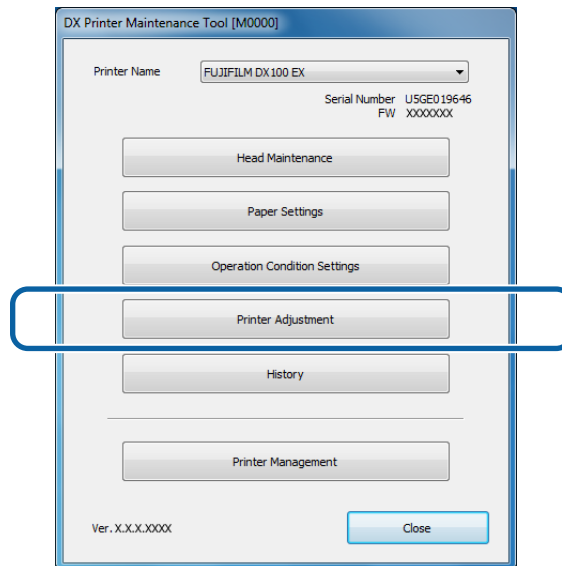

The **Printer Adjustment** screen is displayed.

- 2 Click **Paper Feed Adjustment**.

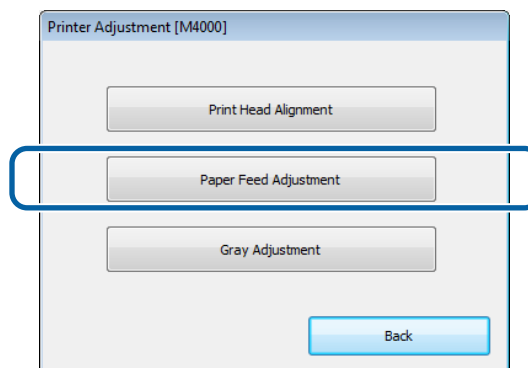


The **Paper Feed Adjustment** screen is displayed.

Using the Maintenance Tool (Windows)

- 3** Check that the printer's paper type and paper width match the paper type and paper width displayed, and then click **Print** from **Adjustment Pattern**.

If the paper type does not match, set the correct paper type in Paper Settings.


 [“Paper Settings” on page 16](#)

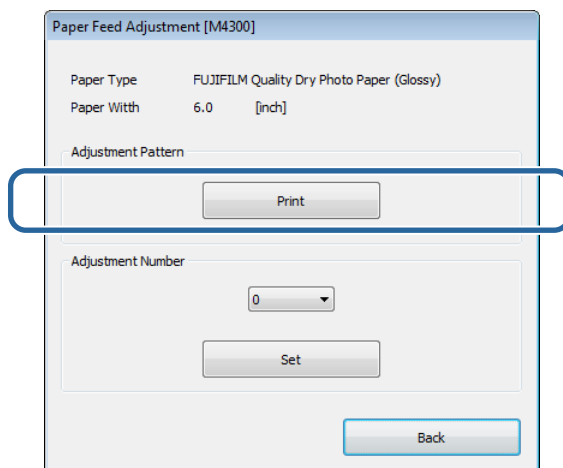

An adjustment pattern is printed.


- 4** Check the print results.

Note the number of the pattern with the fewest line.

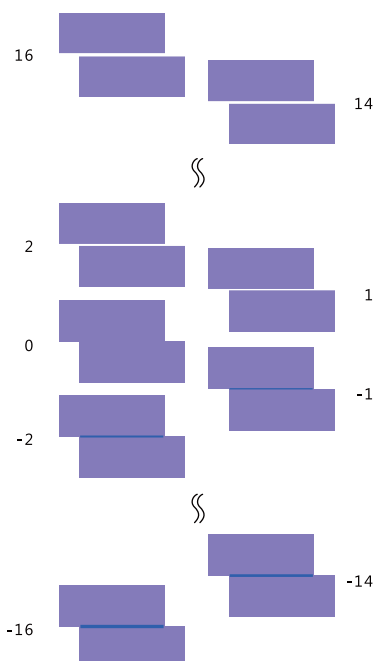

Using the Maintenance Tool (Windows)


Refer to the following illustration and select an adjustment pattern without line.

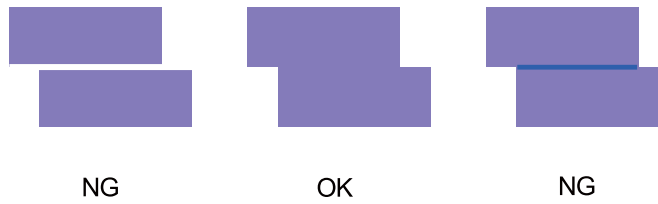

If there are no good patterns among the printed patterns, enter the number for a pattern that is nearly ok, and then reprint the adjustment pattern.

5

Select the pattern number, and then click **Set**.

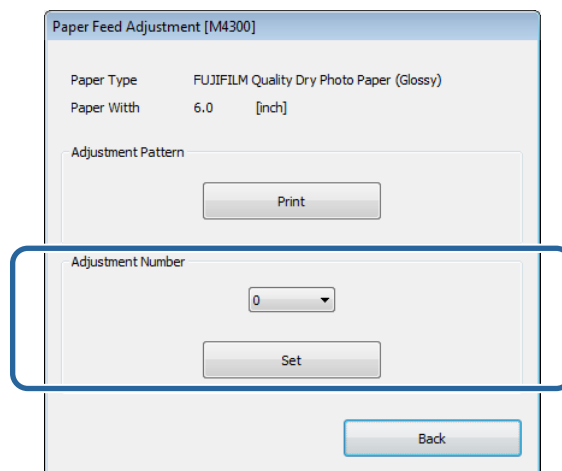

The adjustment values are applied.



Using the Maintenance Tool (Windows)

Gray Adjustment


Adjusts each value for color balance, density, and gradation, to correct the print colors.

You can adjust **Quality** to **Standard** or **High Speed**.

Print an adjustment pattern, and then select the best setting from the patterns.

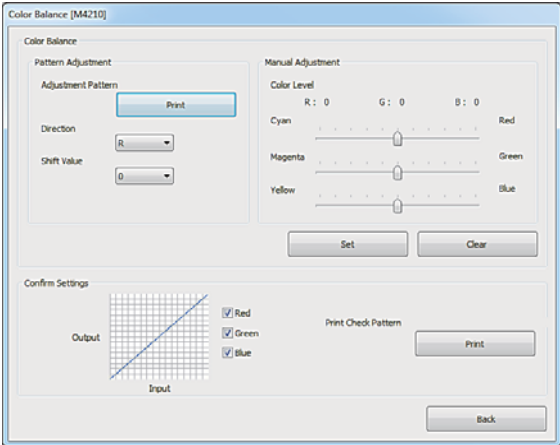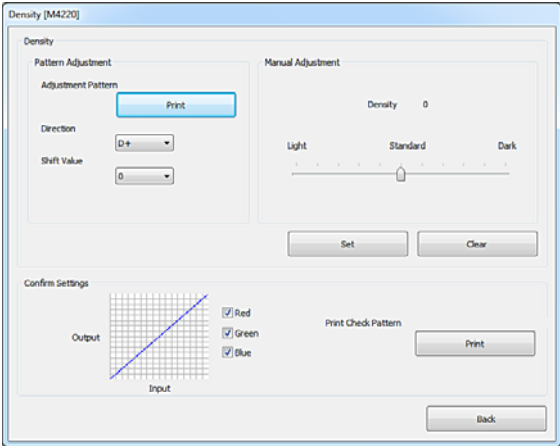
Item	Explanation
Color Balance	<div>Adjusts the strength of C (Cyan), M (Magenta), and Y (Yellow) to adjust the color balance.</div> <div></div>
Density	<div>Adjusts the density (darker/lighter).</div> <div></div>

Using the Maintenance Tool (Windows)

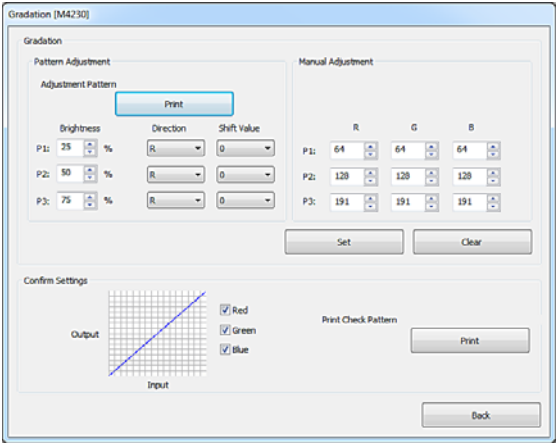
Item	Explanation
Gradation	<div>Adjusts the gradation (difference between light and dark).</div> <div></div>

Note:
When adjusting the color balance so that it matches between multiple printers, print an adjustment pattern for the secondary printers and select the pattern closest to the adjustment pattern for the printer being used as the standard.

Adjustment pattern for the standard printer

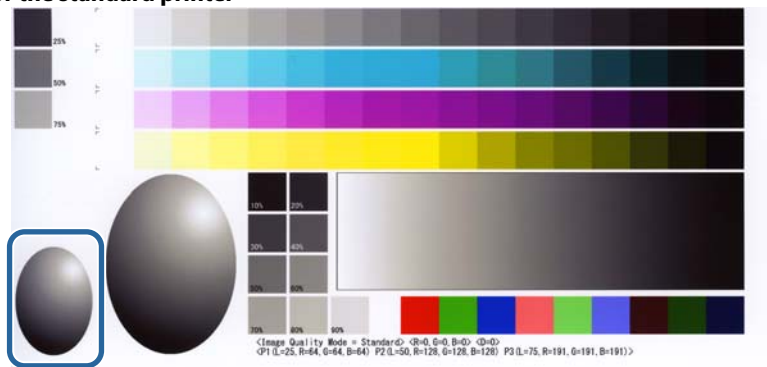


Adjustment pattern for the printer you want to match to the standard printer

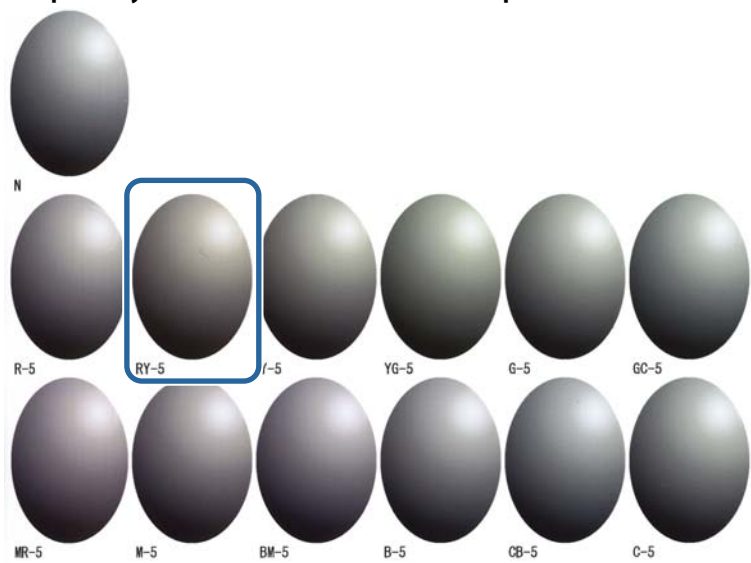

Using the Maintenance Tool (Windows)


Color Balance

- 1 Click **Printer Adjustment** on the main screen.

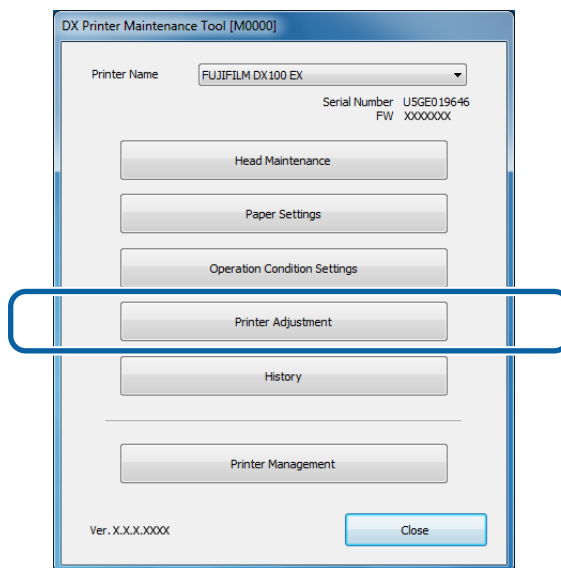

The **Printer Adjustment** screen is displayed.


- 2 Click **Gray Adjustment**.

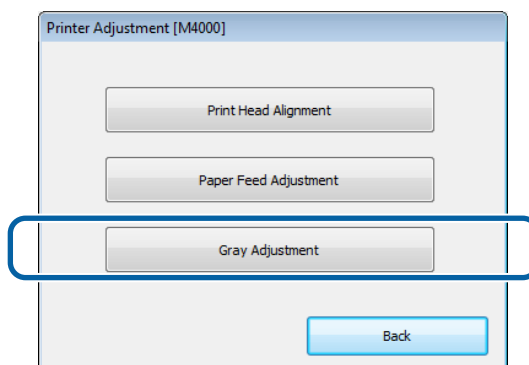

The **Gray Adjustment** screen is displayed.


- 3 Select the image quality setting you want to adjust.

Available image quality settings differ according to the loaded paper type.

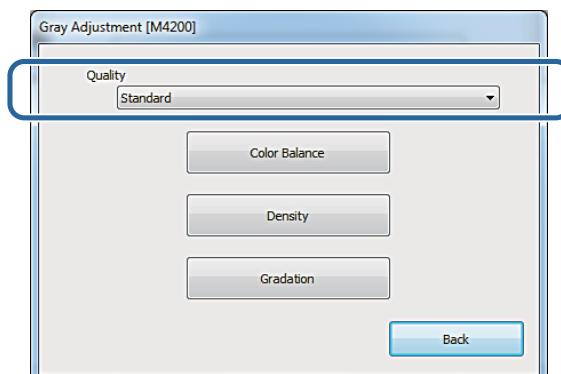


Using the Maintenance Tool (Windows)

- 4 Click **Color Balance**.

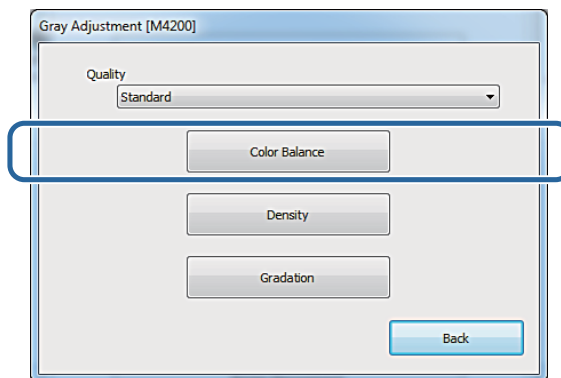

The **Color Balance** screen is displayed.


- 5 On the **Color Balance** screen, click **Print** from **Adjustment Pattern**.

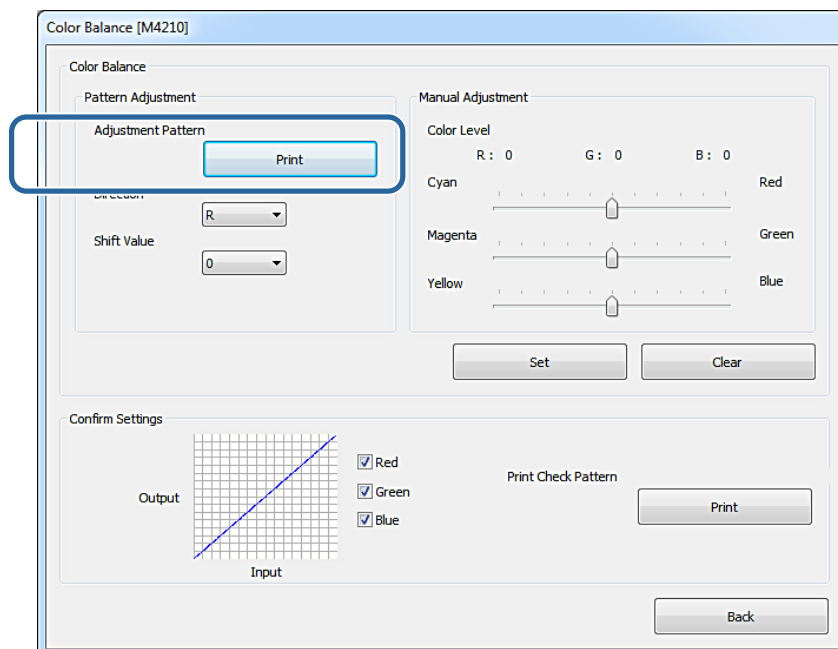

- 6 Select **Adjustment Pattern Shift Value**, and then click **Print**.

If the value is large, an adjustment pattern with a large number of variations in the correction values is printed.

Select a small value to fine-tune your adjustments.

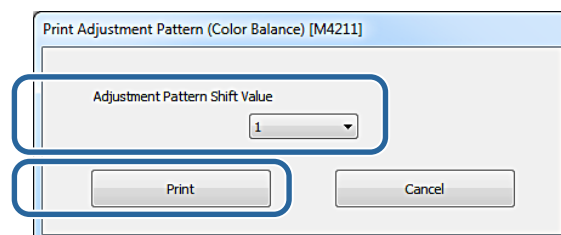

The adjustment pattern is printed.

Using the Maintenance Tool (Windows)


7

Select the best pattern from the adjustment patterns, and check the adjustment number.

The adjustment numbers are the letters and numbers printed at the bottom left of each pattern. (Example: RY-5)

The letters show the direction of the color to be adjusted. "N" indicates no adjustment.


The numbers indicate the shift value.

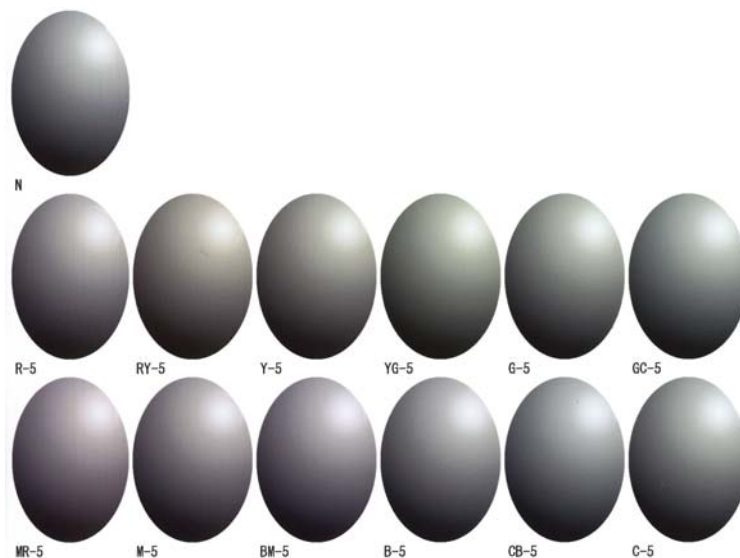

8

Set the **Direction** and **Shift Value**.

Set the adjustment number for the selected adjustment pattern.

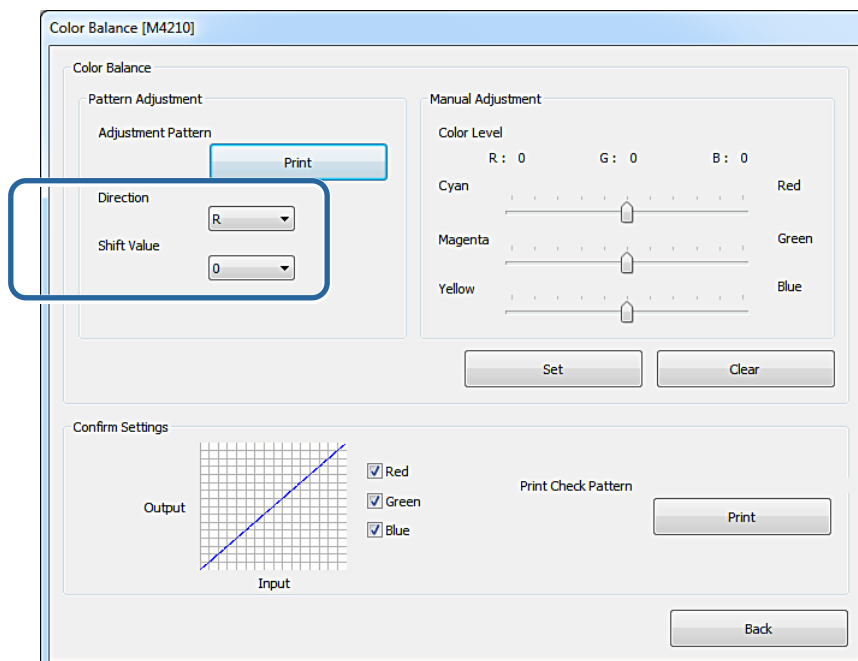

When you change the settings, the changes are reflected in the slide bar on the right of the screen and the graph (tone curve) at the bottom of the screen.

Using the Maintenance Tool (Windows)

Note:


- ❑ The tone curve shows the output strength for each input color (R: Red, G: Green, and B: Blue). When there are no corrections, the line goes straight from the top right to the bottom left; if the line curves down from this position, the colors become darker, and if the line curves up, the colors become lighter.
- ❑ You can adjust the color balance manually in **Manual Adjustment** on the right of the screen. When adjusting manually, the value set in **Pattern Adjustment** is no longer used.
- ❑ If you click **Clear**, the **Color Balance** adjustment number returns to its default value. Save the values in **Density** and **Gradation**.

9

Click **Print** from **Print Check Pattern**.

The check pattern is printed.

Check that the color balance is as you intended.

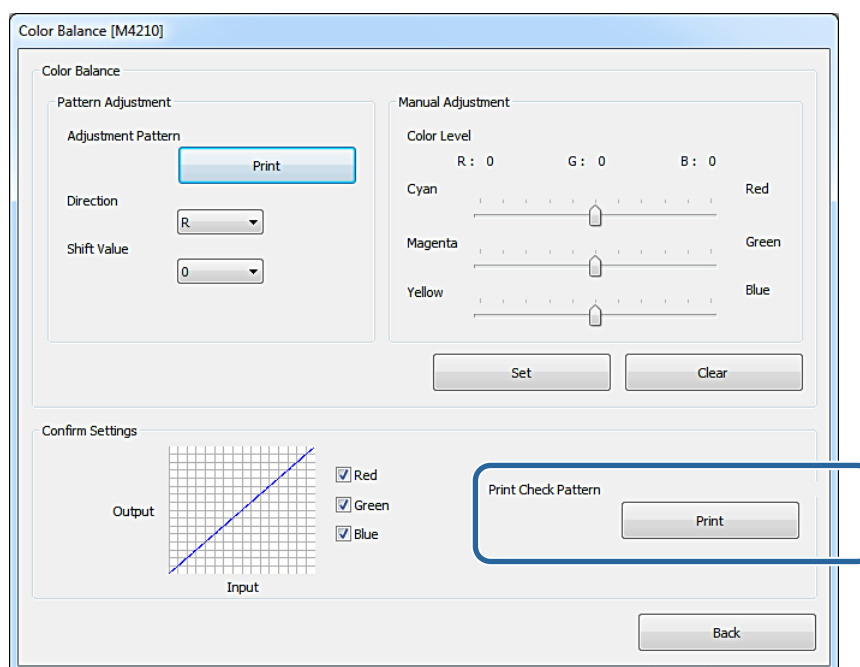

10

Click **Set**.

The settings are applied.

11


Click **Back**.

The Settings screen closes.

Using the Maintenance Tool (Windows)


Density

- 1 Click **Printer Adjustment** on the main screen.

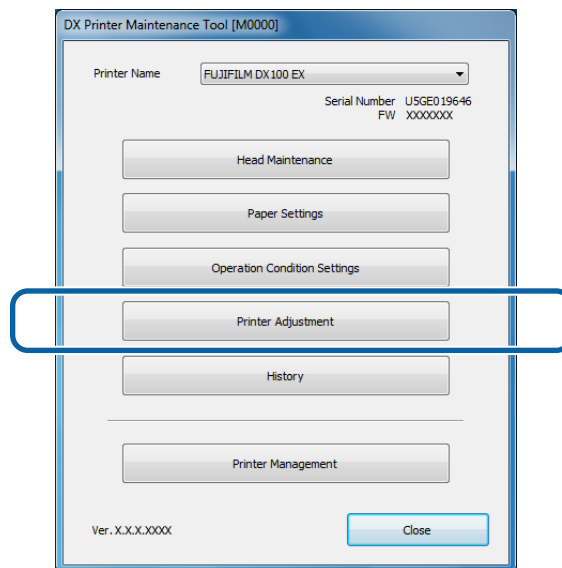

The **Printer Adjustment** screen is displayed.

- 2 Click **Gray Adjustment**.

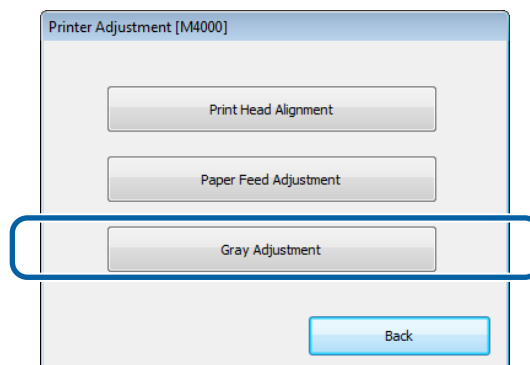


The **Gray Adjustment** screen is displayed.


Using the Maintenance Tool (Windows)

- 3** Select the image quality setting you want to adjust.

Available image quality settings differ according to the loaded paper type.

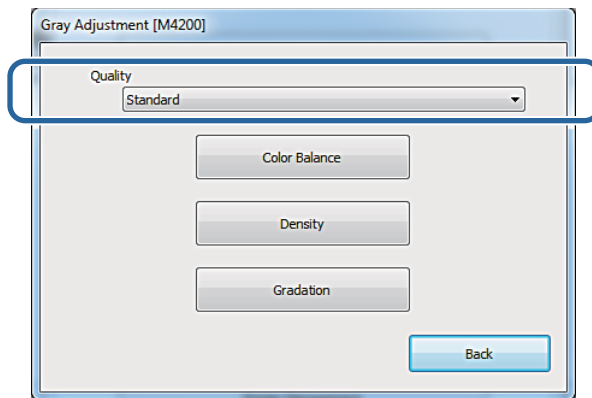

- 4** Click **Density**.

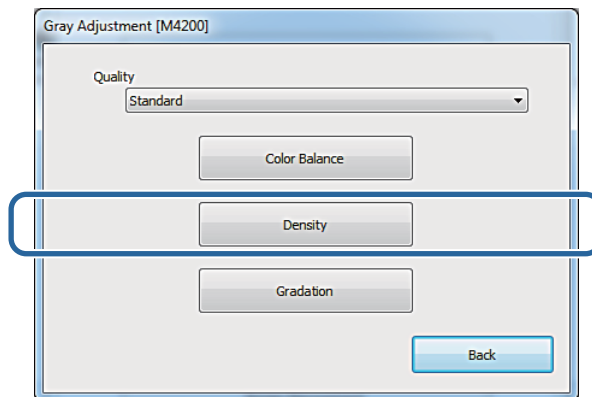


The **Density** screen is displayed.

Using the Maintenance Tool (Windows)

- 5** On the **Density** screen, click **Print** from **Adjustment Pattern**.


The adjustment pattern is printed.

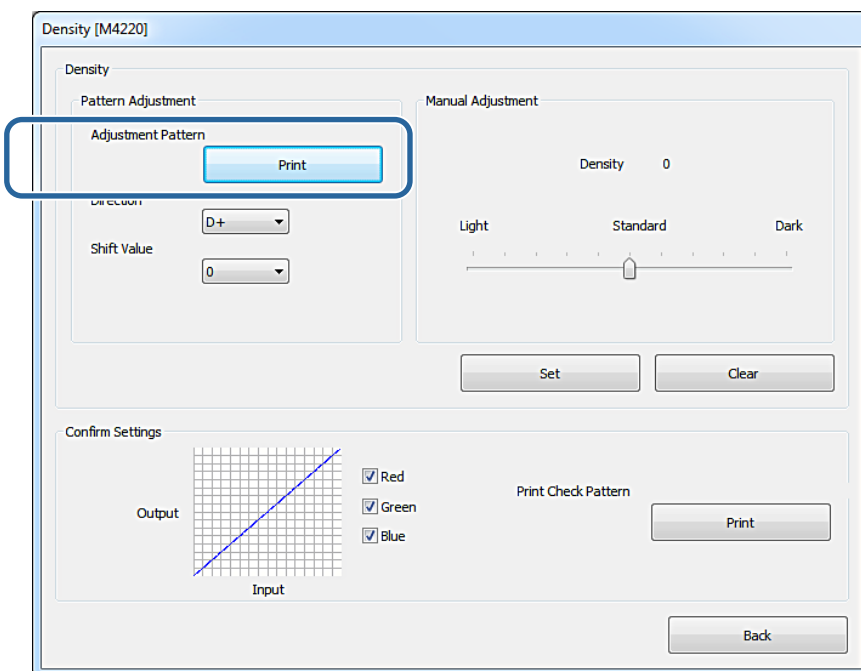

- 6** Select the best pattern from the adjustment patterns, and check the adjustment number.

The adjustment numbers are the letters and numbers printed at the bottom left of each pattern. (Example: D-2)

"N" indicates no adjustment. The numbers indicate the shift value.

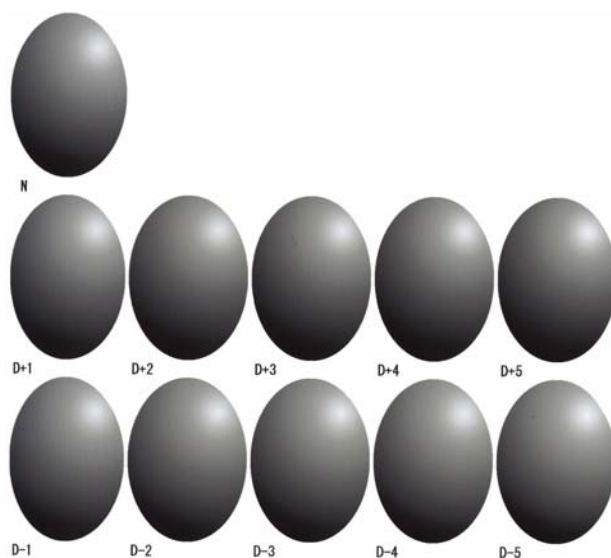


Using the Maintenance Tool (Windows)

7

Set the **Direction** and **Shift Value**.

Set the adjustment number for the selected adjustment pattern.

Set the light and darkness (D+ and D-) in **Direction**, and the numbers in **Shift Value**.

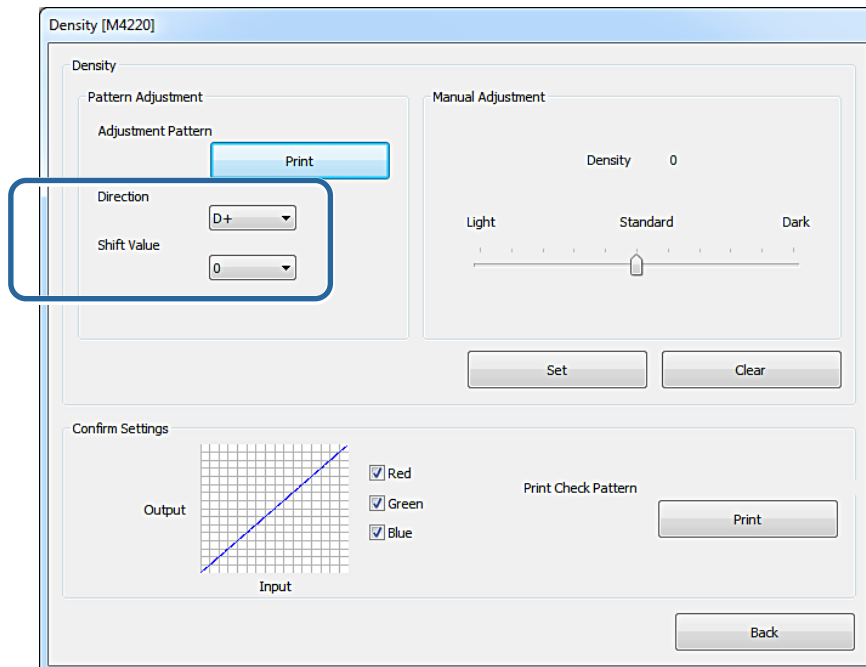

When you change the settings, the changes are reflected in the slide bar on the right of the screen and the graph (tone curve) at the bottom of the screen.

Note:


- ❑ The tone curve shows the output strength for each input color (R: Red, G: Green, and B: Blue). When there are no corrections, the line goes straight from the top right to the bottom left; if the line curves down from this position, the colors become darker, and if the line curves up, the colors become lighter.
- ❑ You can adjust the density manually in **Manual Adjustment** on the right of the screen. When adjusting manually, the value set in **Pattern Adjustment** is no longer used.
- ❑ If you click **Clear**, the **Density** adjustment number returns to its default value. Save the values in **Color Balance** and **Gradation**.

Using the Maintenance Tool (Windows)**8**

Click **Print** from **Print Check Pattern**.

The check pattern is printed.

Check that the color balance is as you intended.

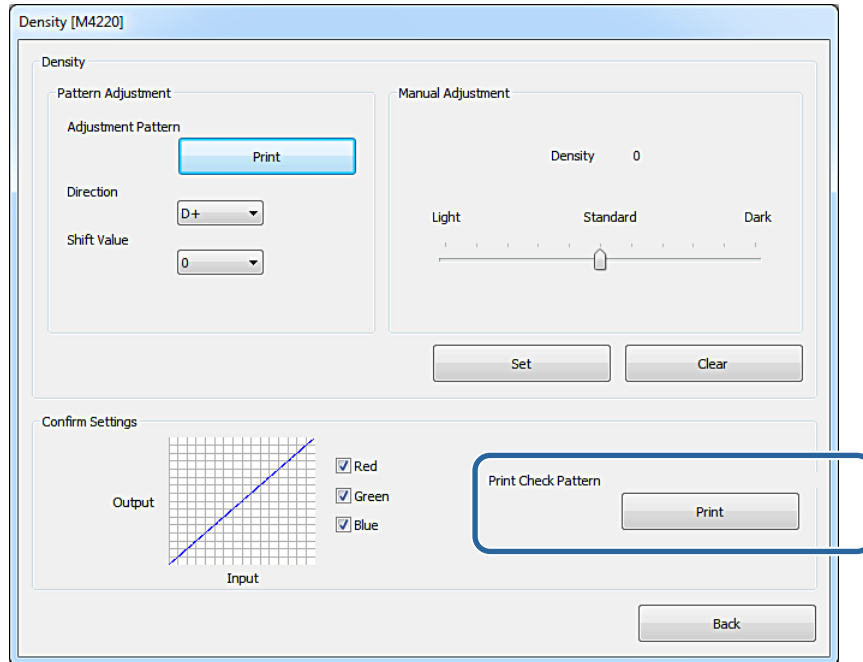**9**

Click **Set**.

The settings are applied.

10


Click **Back**.

The Settings screen closes.

Using the Maintenance Tool (Windows)


Gradation

- 1 Click **Printer Adjustment** on the main screen.

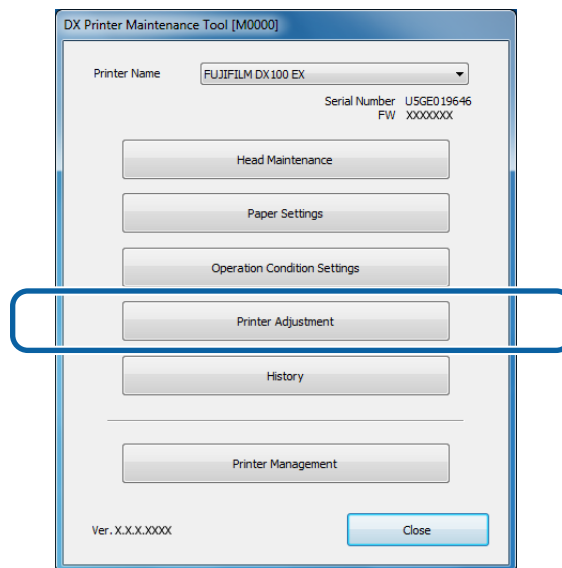

The **Printer Adjustment** screen is displayed.

- 2 Click **Gray Adjustment**.

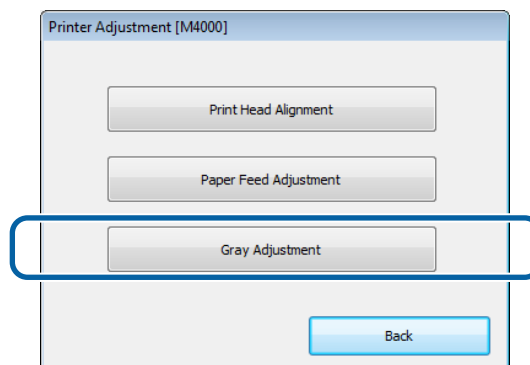


The **Gray Adjustment** screen is displayed.


Using the Maintenance Tool (Windows)

- 3** Select the image quality setting you want to adjust.

Available image quality settings differ according to the loaded paper type.

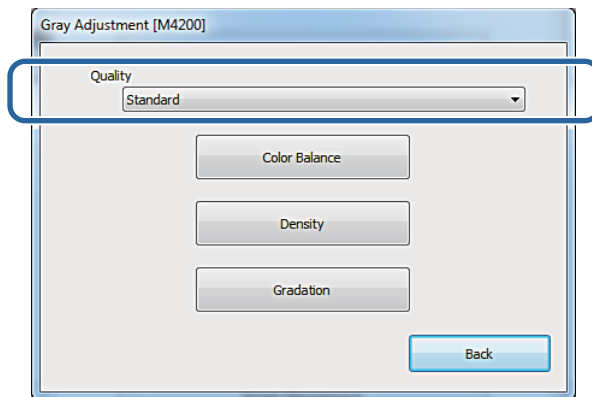


- 4** Click **Gradation**.

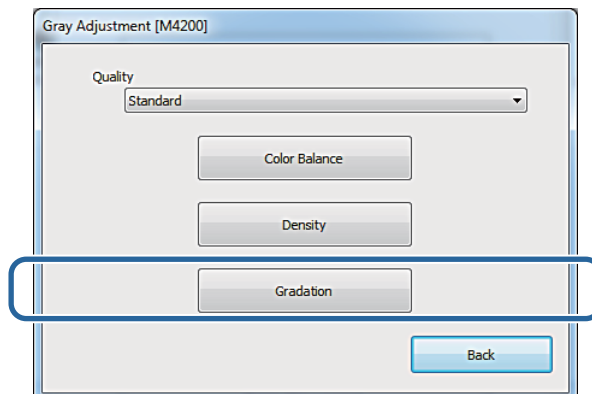


The **Gradation** screen is displayed.

Using the Maintenance Tool (Windows)

5 On the **Gradation** screen, you can adjust the settings for brightness points (P1: shadows, P2: intermediate colors, P3: highlights) if necessary.

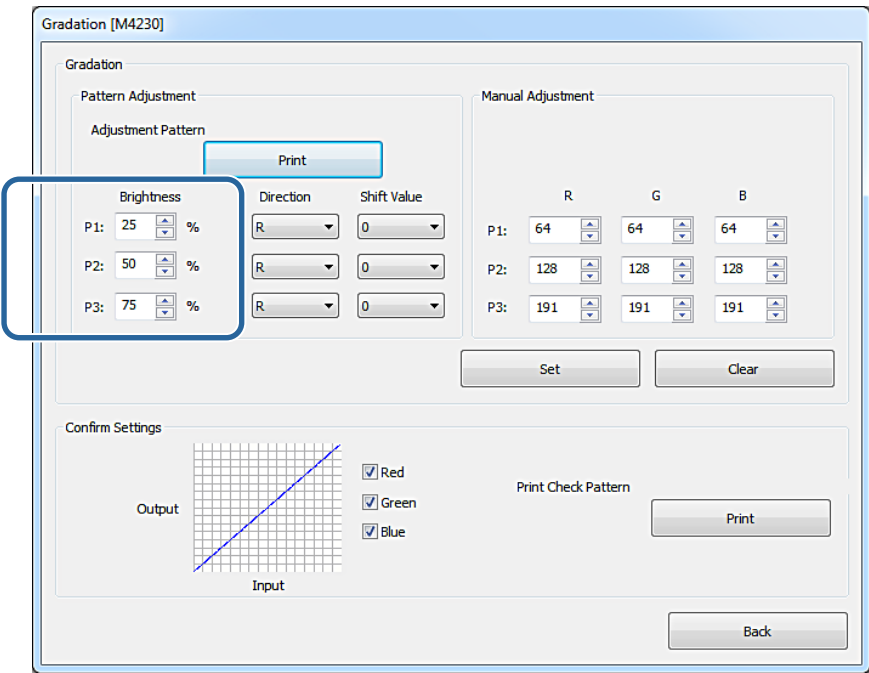

6 Click **Print** from **Adjustment Pattern**.
The screen where you can set the adjustment pattern shift value to be printed is displayed.

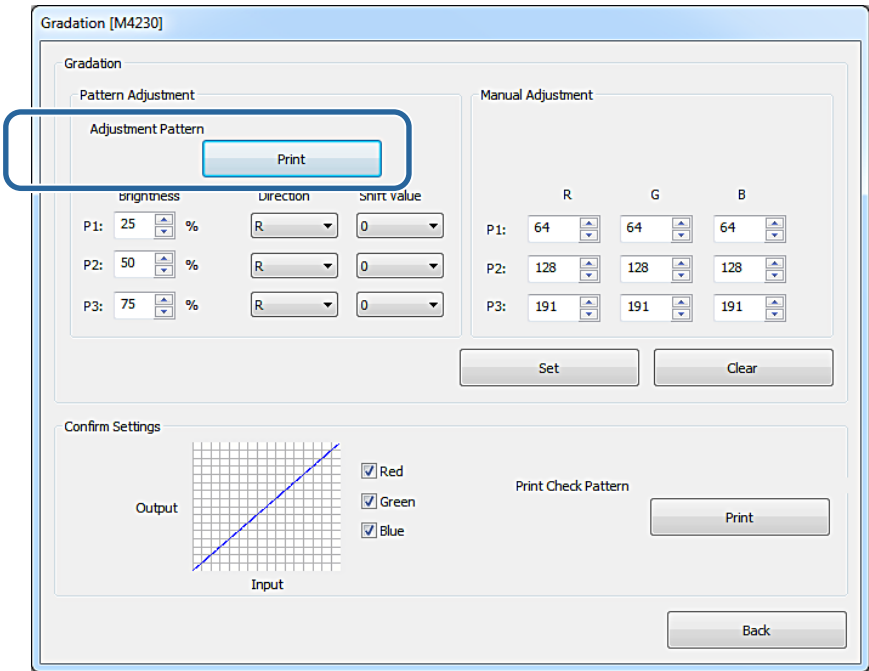


Using the Maintenance Tool (Windows)

7 Select **Adjustment Pattern Shift Value**, and then click **Print**.

If the value is large, an adjustment pattern with a large number of variations in the correction values is printed.
Select a small value to fine-tune your adjustments.

Set the shift value for each brightness point; P1 (shadows), P2 (intermediate colors), and P3 (highlights).

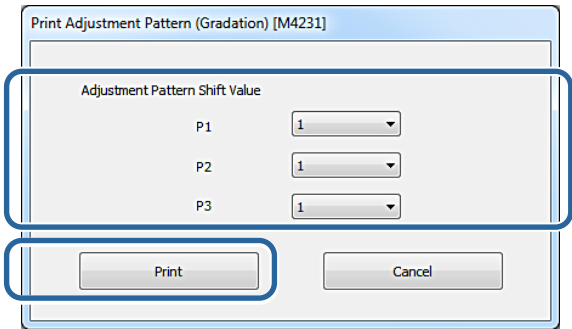

The adjustment pattern is printed.


8 Select the best pattern from the adjustment patterns, and check the adjustment number.

The adjustment numbers are the letters and numbers printed at the bottom left of each pattern. (Example: R-5)

The letters show the direction of the color to be adjusted. "N" indicates no adjustment.

The numbers indicate the shift value.

Check each brightness point; P1 (shadows), P2 (intermediate colors), and P3 (highlights).

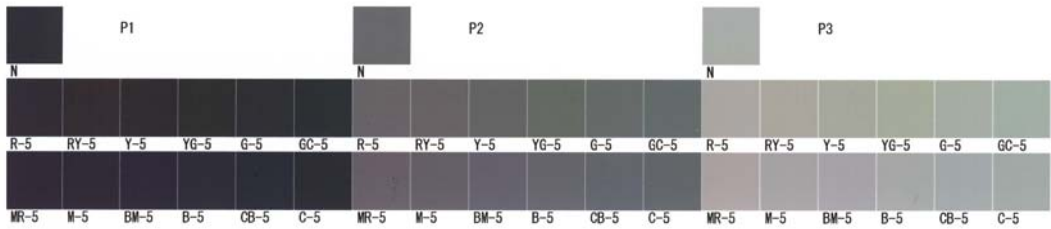

Using the Maintenance Tool (Windows)

9

Set the **Direction** and **Shift Value**.

Set the adjustment number for the selected adjustment pattern.

The screenshot shows the 'Gradation [M4230]' window. It is divided into two main sections: 'Pattern Adjustment' on the left and 'Manual Adjustment' on the right. In the 'Pattern Adjustment' section, there is a 'Print' button at the top. Below it, there are three rows of brightness settings (P1, P2, P3) with percentage values (25%, 50%, 75%) and a 'Direction' dropdown menu set to 'R' and a 'Shift Value' dropdown menu set to '0'. A blue box highlights the 'Direction' and 'Shift Value' dropdowns. In the 'Manual Adjustment' section, there are three rows of color settings (P1, P2, P3) with values for Red (R), Green (G), and Blue (B). The values are: P1: 64, 64, 64; P2: 128, 128, 128; P3: 191, 191, 191. Below these sections are 'Set' and 'Clear' buttons. At the bottom, there is a 'Confirm Settings' section with a graph showing 'Output' vs 'Input' and checkboxes for Red, Green, and Blue. A 'Print Check Pattern' button is also present. A 'Back' button is at the bottom right.

When you change the settings, the changes are reflected in each number for **Manual Adjustment** on the right of the screen and the graph (tone curve) at the bottom of the screen.

Note:


- ❑ The tone curve shows the output strength for each input color (R: Red, G: Green, and B: Blue). When there are no corrections, the line goes straight from the top right to the bottom left; if the line curves down from this position, the colors become darker, and if the line curves up, the colors become lighter.
- ❑ You can adjust the gradation manually in **Manual Adjustment** on the right of the screen. When adjusting manually, the value set in **Pattern Adjustment** is no longer used.
- ❑ If you click **Clear**, the **Gradation** adjustment number returns to its default value. Save the values in **Color Balance** and **Density**.

Using the Maintenance Tool (Windows)

- 10** Click **Print** from **Print Check Pattern**.

The check pattern is printed.

Check that the color balance is as you intended.

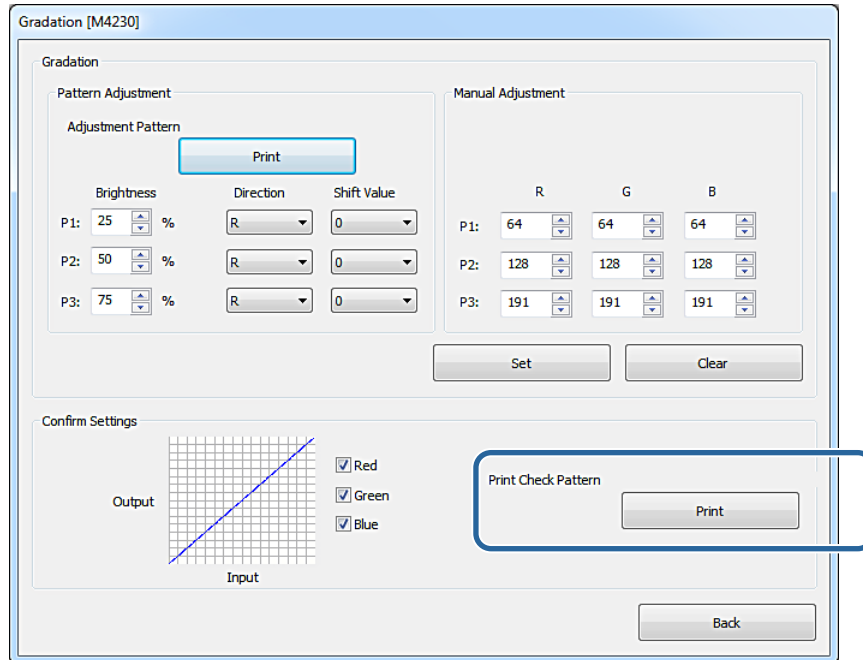

- 11** Click **Set**.

The settings are applied.

- 12** Click **Back**.

The Settings screen closes.

Using the Maintenance Tool (Windows)

Problems with Gray Adjustment

Symptom	Error message	What to do
The print quality of the adjustment pattern is bad	—	Are some print head nozzles clogged? Print an adjustment pattern again after performing head cleaning.
An error occurs when the setting is applied.	Setup failed. Cannot communicate with the selected printer.	Is the printer connected to the computer correctly? Check the connection between the computer and the printer, and then click Apply again.
		Is the computer's hard disk out of space? Free up additional space on the computer's hard disk, and then click Apply again.
The wrong adjustments have been applied. I want to make the adjustments again.	—	Return the settings to their defaults, and then adjust again. Click Clear for Color Balance, Density, and Gradation, and then make the adjustments again.

Using the Maintenance Tool (Windows)


History

In **History**, you can check the **Operation History**, and save log files in **Collect Logs**.

Operation History


You can check errors and the total number of copies printed.

- 1 Click **History** on the main screen.

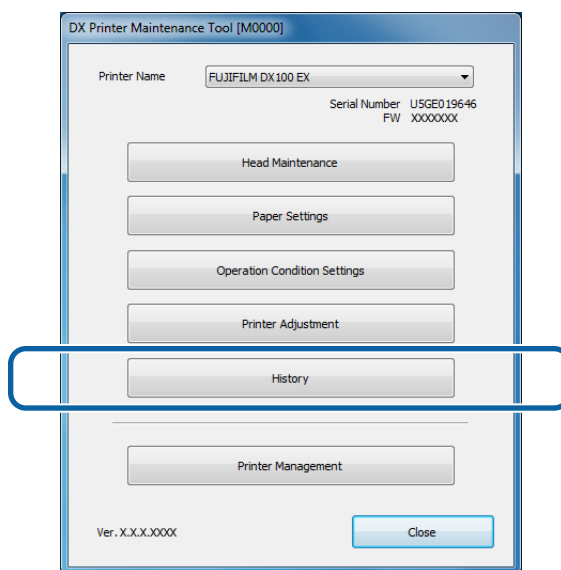

The **History** screen is displayed.

- 2 Click **Operation History**.

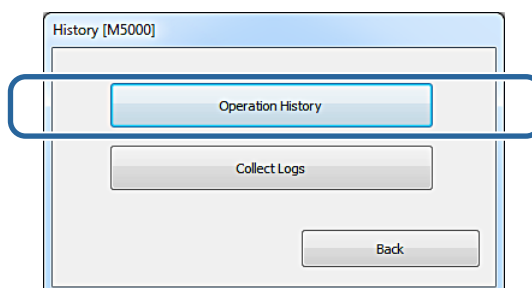

The **Operation History** screen is displayed.

Using the Maintenance Tool (Windows)

3 Check the **Operation History** screen.

Operation History [M5100]

Error History

No	Error ID	Code	Date and Time	Error Details
16	W-1105	0031		Paper is out.
17	W-1105	0031		Paper is out.
18	W-1102	0034		A paper jam has occurred.
19	W-1102	0034		A paper jam has occurred.
20	W-1102	0034		A paper jam has occurred.
21	W-1102	0034		A paper jam has occurred.
22	W-1102	0034		A paper jam has occurred.
23	W-1102	0034		A paper jam has occurred.

Service Call Error

No	Code	Date and Time
1	1935	
2	122A	
3	3000	
4	122A	

Save

Total Number of Copies

Total Number of Copies [Copies]

Back

80 instances of errors and notifications that occurred in the printer, and 20 instances of service call errors are displayed.

The code indicates the error number.

If you click **Save**, the **Save As** screen is displayed and you can save the error history as a text file.

Collect Logs

Saves the log files accumulated on the printer.

1 Click **History** on the main screen.

DX Printer Maintenance Tool [M0000]

Printer Name: FUJIFILM DX100 EX

Serial Number: USGE019646
FW: XXXXXXX

Head Maintenance

Paper Settings

Operation Condition Settings

Printer Adjustment

History

Printer Management


Ver. X.X.X.XXXX

Close

The **History** screen is displayed.


Using the Maintenance Tool (Windows)

- 2 Click **Collect Logs**.

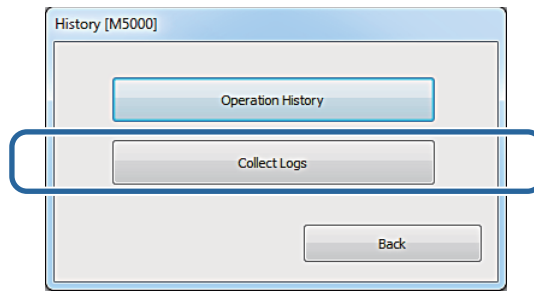

The **Collect Logs** screen is displayed.

- 3 Click **Save**.

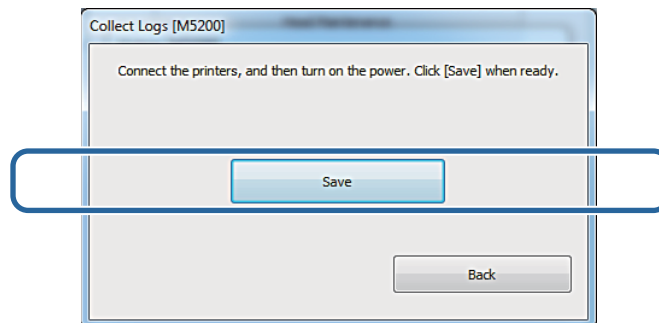

When the **Save As** screen is displayed, you can save the log data as a zip file.

Using the Maintenance Tool (Windows)


Printer Management

In **Printer Management**, you can perform printer management operations such as **Update Paper Information**, **Register/Delete Printer**, **Replace Printer**, and **Spool Folder Settings**.

Register/Delete Printer


Registers or deletes the printer.

- 1 Connect and turn on all of the printers you want to register. Disconnect and turn off all of the printers you want to delete.
- 2 Click **Printer Management** on the main screen.

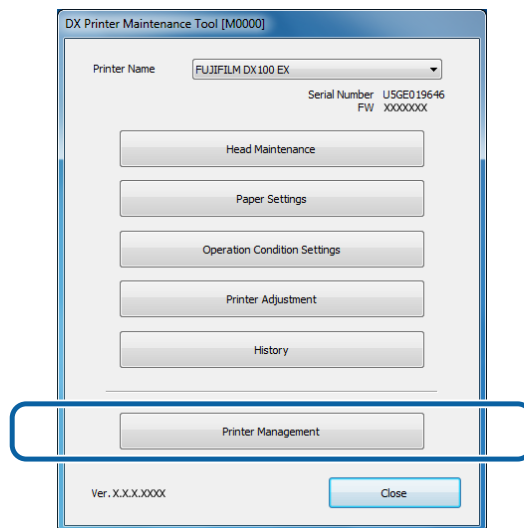

The **Printer Management** screen is displayed.


- 3 Click **Register/Delete Printer**.

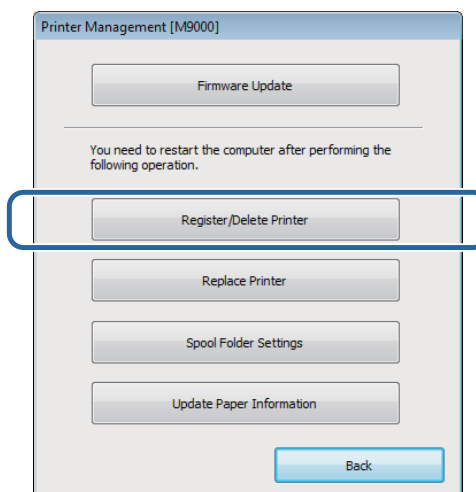

The **Register/Delete Printer** screen is displayed.

Using the Maintenance Tool (Windows)

4

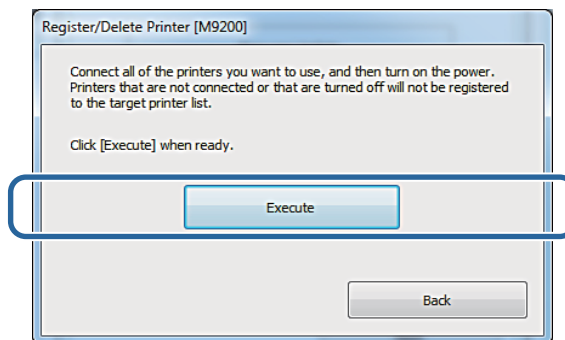Click **Execute**.

Registering and deleting the printers is performed.

A confirmation message is displayed when the process is complete.

Note:

When an updated paper type file is available, the paper information for printers that were additionally registered is updated.

🔗 [“Update Paper Information” on page 56](#)

Replace Printer

Replaces a printer with the same printer name.

You can replace printers automatically or use the Maintenance Tool.

Replacing automatically

Use the automatic printer replacement function to replace a printer.

When the automatic printer replacement function is enabled, you can replace a printer automatically. This function is enabled when the Maintenance Tool is installed.



Using the Maintenance Tool (Windows)

- 1 Disconnect the printer you do not want to use. Connect the printer you want to use instead, and then turn on the printer.

The printer replacement process starts. When it is complete, the computer restarts automatically.

Note:

*If you load paper from the old printer into the new printer and then turn on the printer, the information in **Paper Level** is also transferred to the new printer.*

- 2 Register the paper information again in **Paper Settings**.

 [“Paper Settings” on page 16](#)


Replacing using the Maintenance Tool

Use the Maintenance Tool to replace a printer.

- 1 Right-click the DX100 icon on the task tray.



- 2 Click **Enable automatic printer replacement** to clear the check mark.

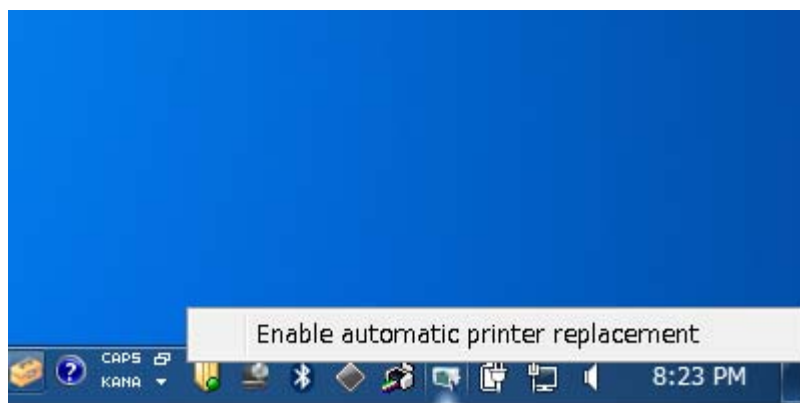


Using the Maintenance Tool (Windows)

- 3 Disconnect the printer you do not want to use. Connect and turn on the printer you want to use instead.

Note:


If you load paper from the old printer into the new printer and then turn on the printer, the information in **Paper Level** is also transferred to the new printer.

- 4 Click **Printer Management** on the main screen.

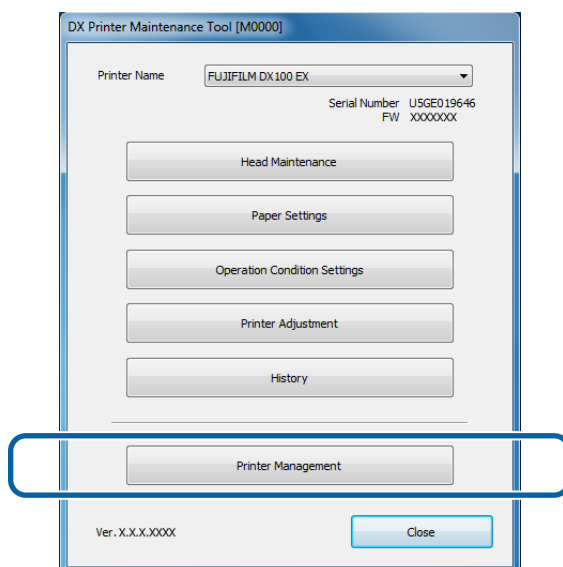

The **Printer Management** screen is displayed.


- 5 Click **Replace Printer**.

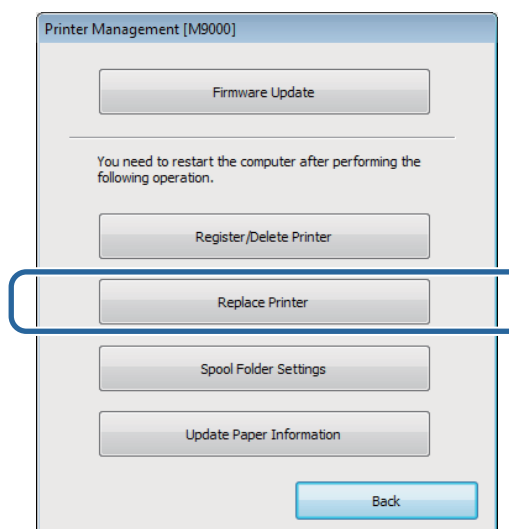

The **Replace Printer** screen is displayed.

Using the Maintenance Tool (Windows)

6 Click **Execute**.

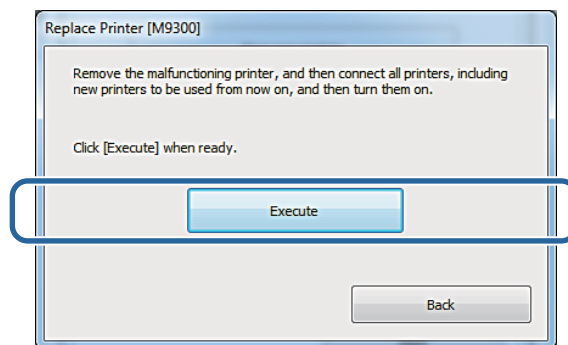


The printer replacement process is performed.

A confirmation message is displayed when the process is complete.

When multiple printers are connected, the **Select Printer for Replacement** screen is displayed.

Select the printer in the next step.

7 When multiple printers are connected, select the printer you want to replace, and then click **OK**.

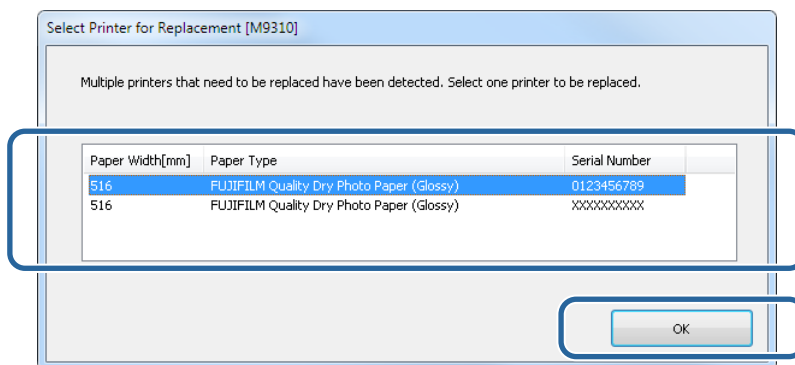

The printer replacement process is performed.

A confirmation message is displayed when the process is complete.

Note:

When an updated paper type file is available, the paper information for printers that were additionally registered is updated.

🔗 [“Update Paper Information” on page 56](#)


8 Restart the computer.

Using the Maintenance Tool (Windows)

- 9 Right-click the DX100 icon on the task tray.



- 10 Click **Enable automatic printer replacement** to add a check mark.

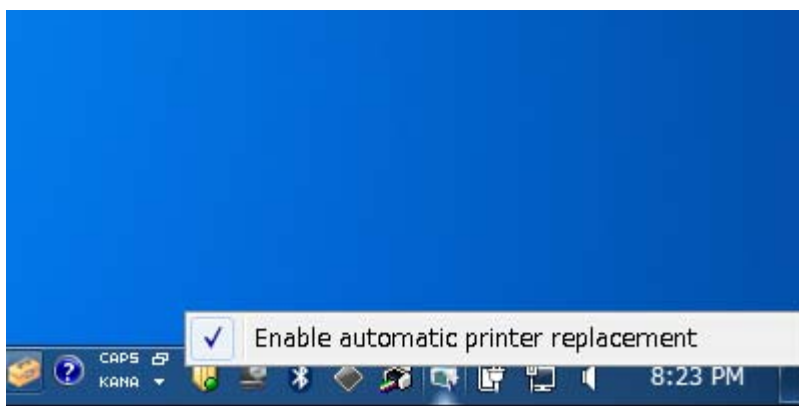

- 11 Register the paper information again in **Paper Settings**.


 [“Paper Settings” on page 16](#)

Using the Maintenance Tool (Windows)

Spool Folder Settings


Set the folder that temporarily stores the spooled data for printing that was generated by the printer driver.

- 1 Click **Printer Management** on the main screen.

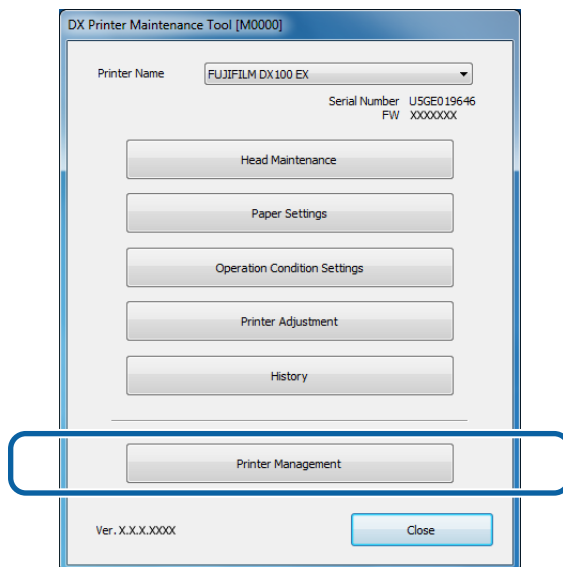

The **Printer Management** screen is displayed.


- 2 Click **Spool Folder Settings**.

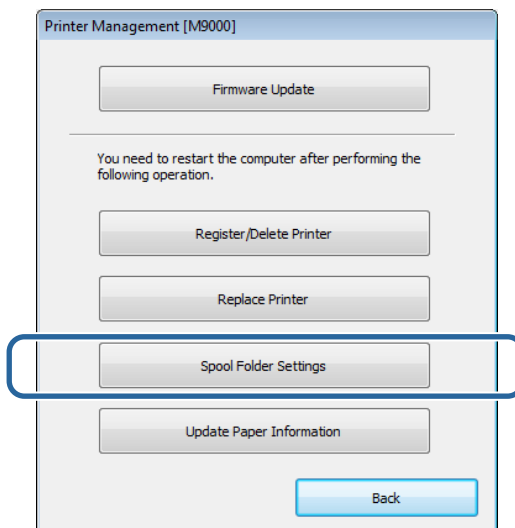

The **Spool Folder Settings** screen is displayed.


Using the Maintenance Tool (Windows)

- 3 Click **Select Folder**.

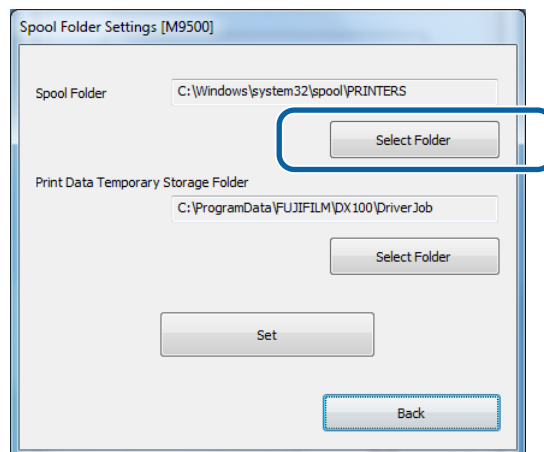

The select folder screen is displayed.

- 4 Select a folder, and then click **OK**.

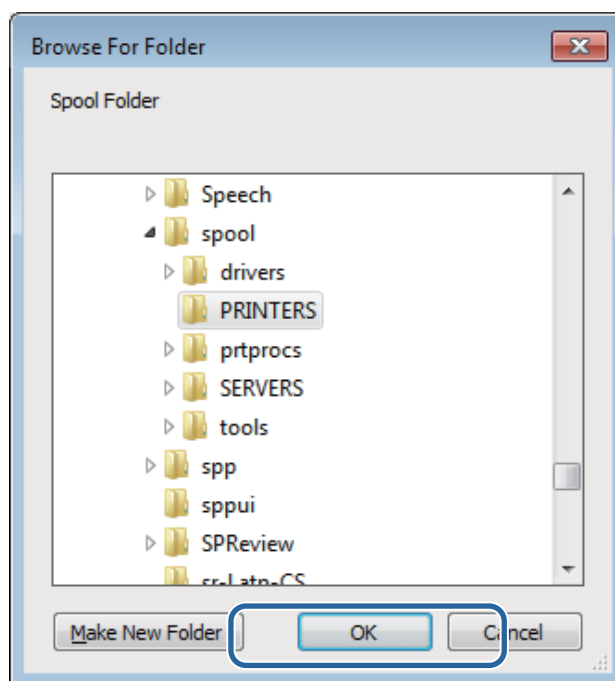

The path to the selected folder is displayed.

- 5 Repeat steps 3 and 4 to set the **Print Data Temporary Storage Folder**.

- 6 Check that the printer is connected and turned on, and that printing is complete.

When multiple printers are connected, check all of the printers.

Check that there are no print jobs remaining.


Using the Maintenance Tool (Windows)

**Important:**

Do not print while making settings.

7

Click **Set**.

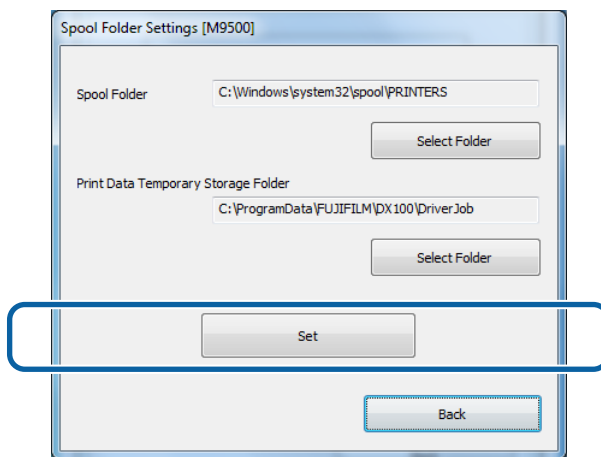


The spool folder is set.

Update Paper Information

Registers a paper type file to the printer.

1


Click **Printer Management** on the main screen.

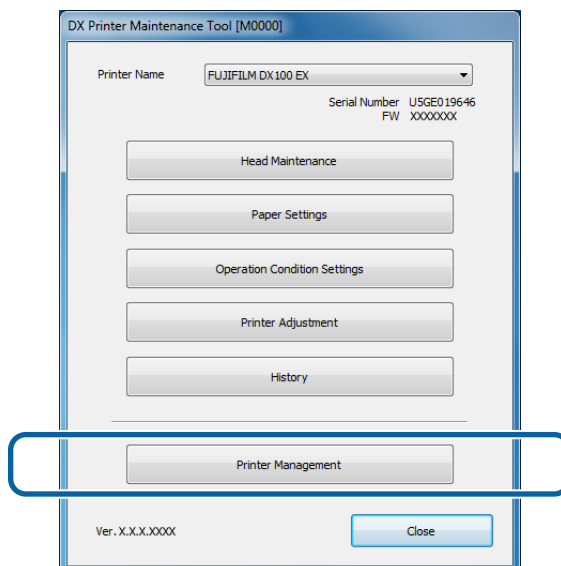

The **Printer Management** screen is displayed.


Using the Maintenance Tool (Windows)

2 Click **Update Paper Information**.

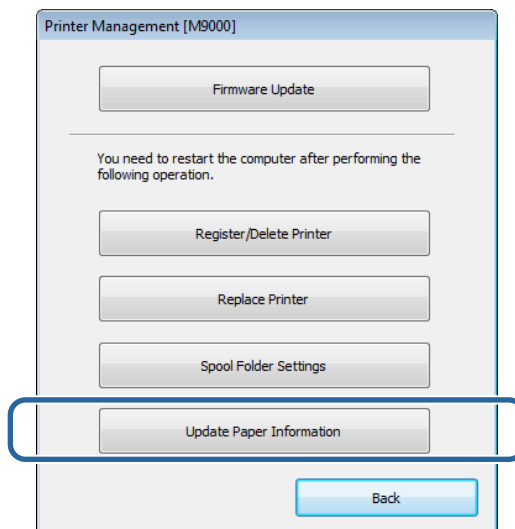


The **Update Paper Information** screen is displayed.

3 Click **Select Paper Type File**.

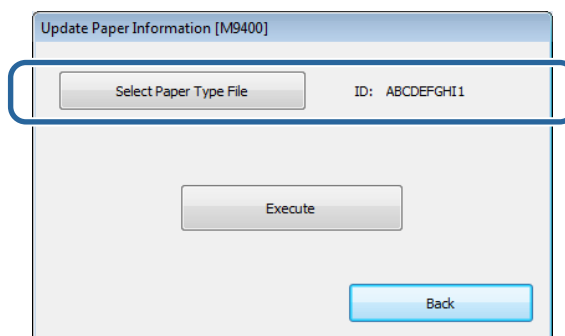

The select file screen is displayed.

4 Select a paper type file, and then click **Open**.

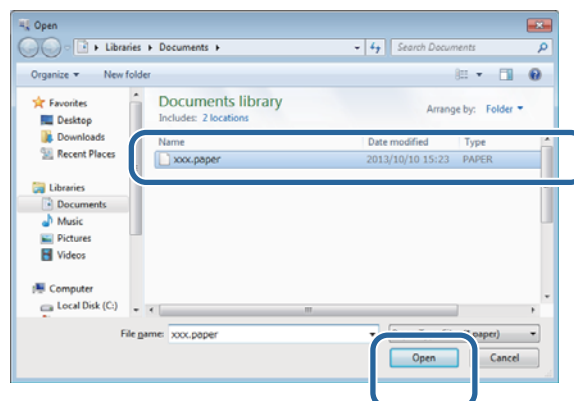

The ID for the selected paper type file is displayed.

Using the Maintenance Tool (Windows)

! **Important:**
Make sure you select a paper type file.


Note:
Contact your local dealer for information on acquiring paper type files.

5 Check that the printer is connected and turned on.

When multiple printers are connected, check all of the printers.

! **Important:**
Do not print while during registration.

6 Click **Execute**.

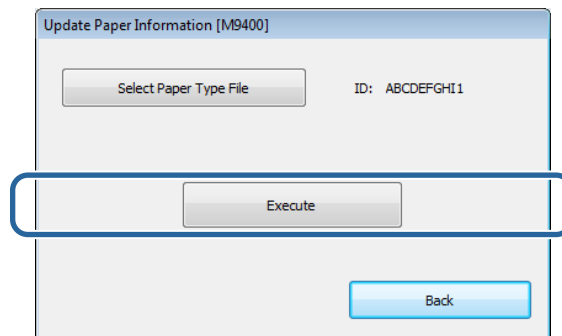

The paper information is updated.

A confirmation message is displayed when the update is complete.


Using the Maintenance Tool (Windows)

Troubleshooting

Error Messages

Error messages (Printer Window screen) are displayed when an error occurs in the printer while printing.


The error code, error details, solutions, and so on are displayed on the screen.

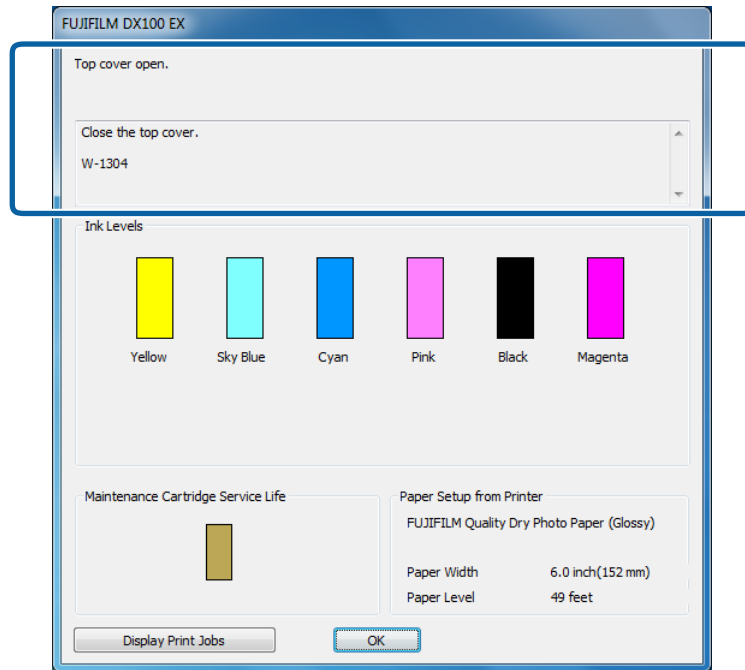

Using the Maintenance Tool (Windows)

Note:

- See the "Operation Guide" for a list of error messages and solutions.
"Operation Guide" - "Errors and Solutions"
- You can access the Printer Window screen using any of the following methods.
 - Click Print and so on from the File menu of the application you are using.
 - Select this printer, and then click Print Settings (or Detailed Settings or Properties).
 - On the Main screen, click **Display Printer Status**.

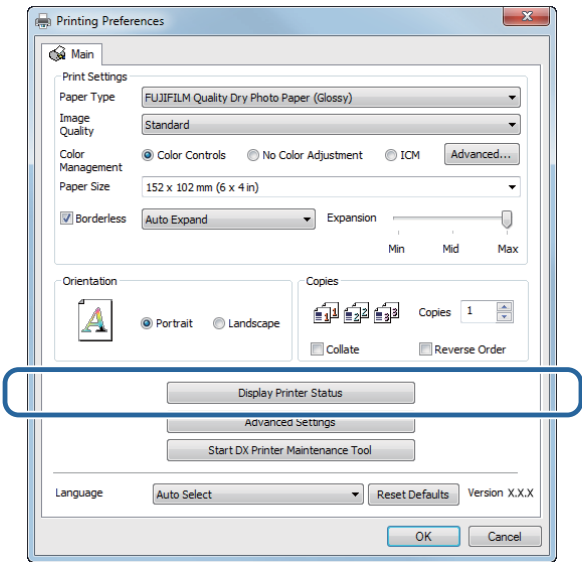


The printer is not replaced automatically


Cause	What to do
Printer is not replaced automatically	<p>Is the printer icon displayed under "Unspecified" in the "Devices and Printers" or "Printers and Faxes" folder?</p> <p>If the icon is displayed under Unspecified, do the following:</p> <ol style="list-style-type: none">Click Start - Control Panel - Hardware and Sound - Device Manager - Other devices.Right-click FUJIFILMDX100, and then click Update Driver Software.Click Search automatically for updated driver software.After the driver software is updated, click Close to start automatic replacement for the printer. Once replacement is complete, the computer restarts automatically.

Using the Maintenance Tool (Windows)

 Cannot perform Replace Printer from Maintenance Tool

Cause	What to do
The message "Cannot find a printer requiring replacement." is displayed.	<p>Is the printer icon displayed under "Unspecified" in the "Devices and Printers" or "Printers and Faxes" folder?</p> <p>If the icon is displayed under Unspecified, do the following:</p> <ol style="list-style-type: none"> 1. Click OK on the message displayed, and then close Maintenance Tool. 2. Click Start - Control Panel - Hardware and Sound - Device Manager - Other devices. 3. Right-click FUJIFILMDX100, and then click Update Driver Software. 4. Click Search automatically for updated driver software. 5. After the driver software is updated, click Close. 6. Start Maintenance Tool, and replace the printer.  "Replace Printer" on page 49

Cannot perform Register/Delete Printer correctly

Cause	What to do
The message "Registering/deleting the printer is complete. 0 registered, X deleted." is displayed.	<p>Is the printer icon displayed under "Unspecified" in the "Devices and Printers" or "Printers and Faxes" folder?</p> <p>If the icon is displayed under Unspecified, do the following:</p> <ol style="list-style-type: none"> 1. Click OK on the message displayed, and then close Maintenance Tool. 2. Click Start - Control Panel - Hardware and Sound - Device Manager - Other devices. 3. Right-click FUJIFILMDX100, and then click Update Driver Software. 4. Click Search automatically for updated driver software. 5. After the driver software is updated, click Close. 6. Start Maintenance Tool, and then register the printer.  "Register/Delete Printer" on page 48

Using the Maintenance Tool (Mac OS X)

Summary of the Maintenance Tool

From your computer you can perform adjustment and maintenance operations such as checking the printer's status, making settings, performing head cleaning and so on.

Starting and closing


Starting (Mac OS X 10.6.x/10.7.x/10.8.x/10.9.x/10.10.x)

- 1 Select **System Preferences > Print & Scan** (or **Print & Fax**) from the **Apple** menu.
- 2 Select the printer and click **Options & Supplies > Utility > Open Printer Utility**.

Starting (for Mac OS X 10.5.8)

- 1 Select **System Preferences > Print & Fax** from the **Apple** menu.
- 2 Select the printer and click **Open Print Queue > Utility**.

Maintenance Tool screen

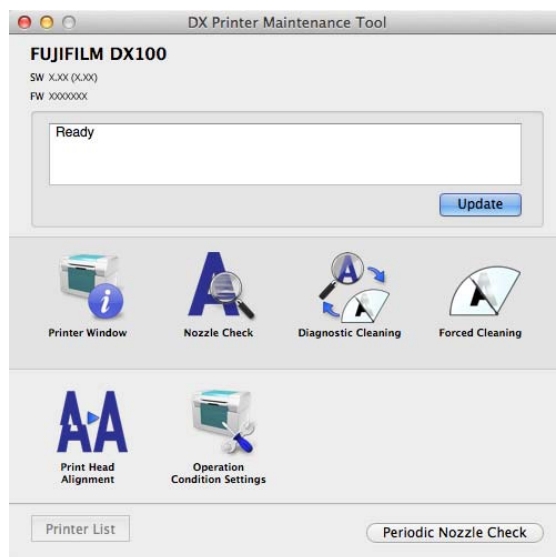


Using the Maintenance Tool (Mac OS X)


Note:

When errors occur in the printer while printing, click **Printer Window** on the main screen and check the content of the error and solutions.

Click **Cancel** on the error screen to return to the main screen.

 
 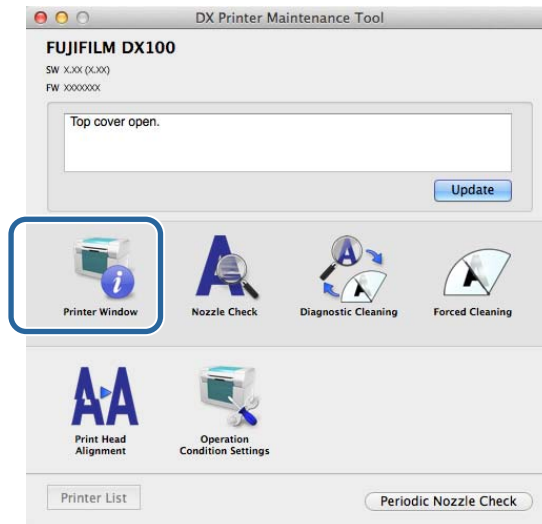

 


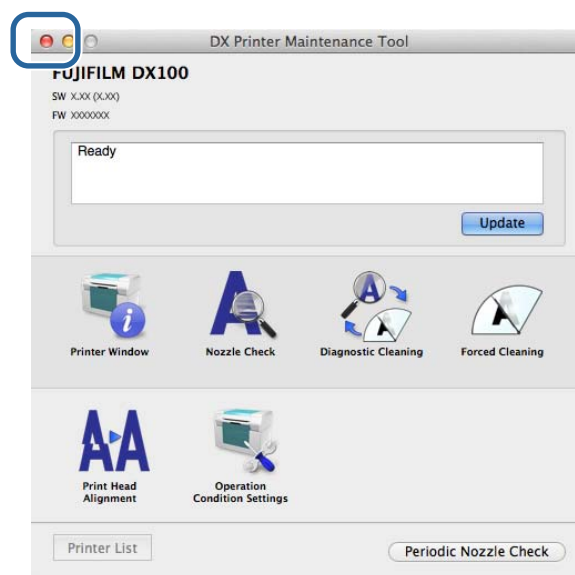


**Closing**

Click the red Close button (X) at the top-left of the screen.



Using the Maintenance Tool (Mac OS X)


List of functions

Main Screen Functions	Setting Item	Settings
Message	-	Displays the printer's status. Click Update to update to the latest status.
Printer Window	-	Allows you to check the amount of ink remaining, the free space in the maintenance cartridge, and so on.  "Printer Window" on page 65
Nozzle Check	-	Allows you to print a check pattern and visually check for clogged nozzles.  "Nozzle Check" on page 68
Diagnostic Cleaning	-	Detects clogged nozzles and automatically performs cleaning.  "Diagnostic Cleaning" on page 70
Forced Cleaning	-	Performs manual cleaning.  "Forced Cleaning" on page 71
Print Head Alignment	-	Corrects the print misalignment.  "Print Head Alignment" on page 74
Operation Condition Settings	Time Before Switching to Sleep Mode	Set the time before switching to sleep mode.  "Time Before Switching to Sleep Mode" on page 78
	Warning Buzzer	Set whether or not to use the warning buzzer.  "Warning Buzzer" on page 79
	Paper Settings	Set the paper information.  "Paper Settings" on page 80
Printer List	-	Displays a list of available printers allowing you to select the printer you want to configure.
Periodic Nozzle Check	-	Set whether or not to automatically perform a nozzle check.  "Periodic Nozzle Check" on page 82


Using the Maintenance Tool (Mac OS X)

Printer Window

Click **Printer Window** on the main screen.

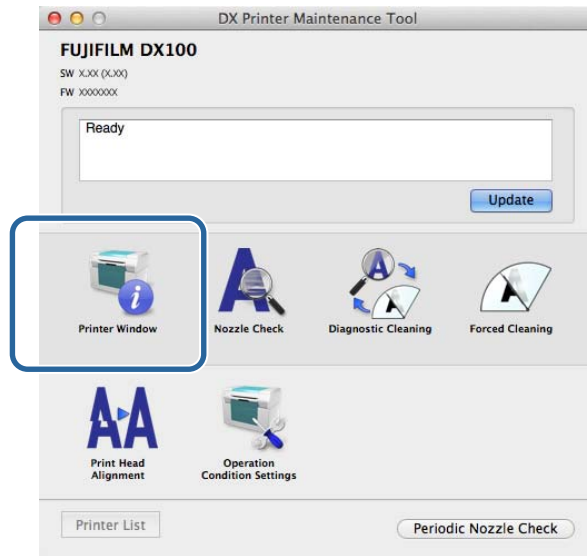

Allows you to check the printer's status such as the amount of ink remaining, the free space in the maintenance cartridge, and information on the paper loaded in the printer and so on from your computer.

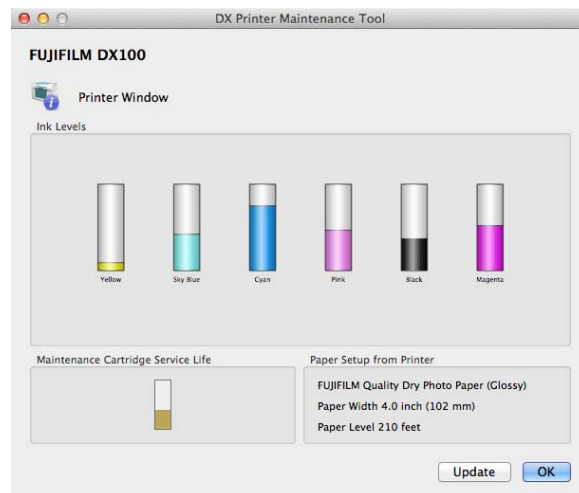

Click **Update** to update to the latest status.


Using the Maintenance Tool (Mac OS X)

Adjusting the Print Head




Performing Head Maintenance

Nozzle Check, **Diagnostic Cleaning**, and **Forced Cleaning** are head maintenance functions that check for clogging in the print head and clear clogging if it is detected.

If nozzles are clogged, lines appear in the print outs, and colors are not printed correctly. If this occurs, use the head maintenance functions as described on the following pages.

Make sure the printer's  light is on before performing **Head Maintenance**.

The following three functions are available for **Head Maintenance**.

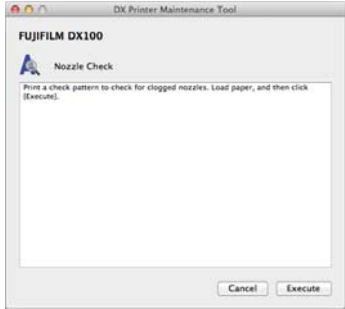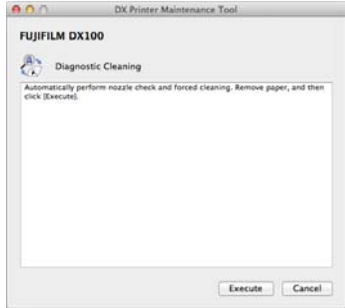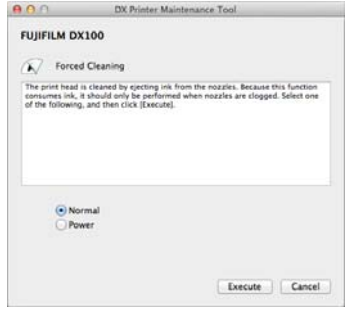Nozzle Check	Checks for clogged nozzles.	
Diagnostic Cleaning	Detects clogged nozzles and automatically performs head cleaning.	
Forced Cleaning	Perform head cleaning manually.	

Using the Maintenance Tool (Mac OS X)

1	<p>Abnormalities appear in the print outs such as lines, or colors are not printed correctly.</p> <p><Print example></p> <div data-bbox="520 338 817 568" data-label="Image"> </div> <div data-bbox="850 338 1147 568" data-label="Image"> </div>
---	--



2	<p>Execute Diagnostic Cleaning.</p> <table border="1" data-bbox="228 770 1442 1043"> <tr> <td data-bbox="228 770 836 1043"> <p>When "Diagnostic cleaning completed." is displayed on the screen</p> <p>-> Operations are complete.</p> </td><td data-bbox="836 770 1442 1043"> <p>When "Diagnostic cleaning is finished. Clogged nozzles detected. Perform diagnostic cleaning again. If the clogging is not cleared even after repeating diagnostic cleaning three times, execute [Power] from [Forced Cleaning]." is displayed on the screen</p> <p>-> Execute Diagnostic Cleaning again.</p> <p>If nozzles are still clogged after repeating this three times, go to the next step.</p> </td></tr> </table>	<p>When "Diagnostic cleaning completed." is displayed on the screen</p> <p>-> Operations are complete.</p>	<p>When "Diagnostic cleaning is finished. Clogged nozzles detected. Perform diagnostic cleaning again. If the clogging is not cleared even after repeating diagnostic cleaning three times, execute [Power] from [Forced Cleaning]." is displayed on the screen</p> <p>-> Execute Diagnostic Cleaning again.</p> <p>If nozzles are still clogged after repeating this three times, go to the next step.</p>
<p>When "Diagnostic cleaning completed." is displayed on the screen</p> <p>-> Operations are complete.</p>	<p>When "Diagnostic cleaning is finished. Clogged nozzles detected. Perform diagnostic cleaning again. If the clogging is not cleared even after repeating diagnostic cleaning three times, execute [Power] from [Forced Cleaning]." is displayed on the screen</p> <p>-> Execute Diagnostic Cleaning again.</p> <p>If nozzles are still clogged after repeating this three times, go to the next step.</p>		



3	<p>Execute Power from Forced Cleaning, and then check Print Check Pattern.</p> <table border="1" data-bbox="228 1252 1442 1373"> <tr> <td data-bbox="228 1252 836 1373"> <p>When there are no problems in the check pattern print results</p> <p>-> Operations are complete.</p> </td><td data-bbox="836 1252 1442 1373"> <p>When there are problems in the check pattern print results</p> <p>-> Contact service support.</p> </td></tr> </table>	<p>When there are no problems in the check pattern print results</p> <p>-> Operations are complete.</p>	<p>When there are problems in the check pattern print results</p> <p>-> Contact service support.</p>
<p>When there are no problems in the check pattern print results</p> <p>-> Operations are complete.</p>	<p>When there are problems in the check pattern print results</p> <p>-> Contact service support.</p>		


Using the Maintenance Tool (Mac OS X)

Nozzle Check

The **Nozzle Check** function checks for clogged nozzles in the print head. Print a check pattern and visually check for clogged nozzles.


After the nozzle check, execute **Forced Cleaning** if necessary.

- 1 Click **Nozzle Check** on the main screen.

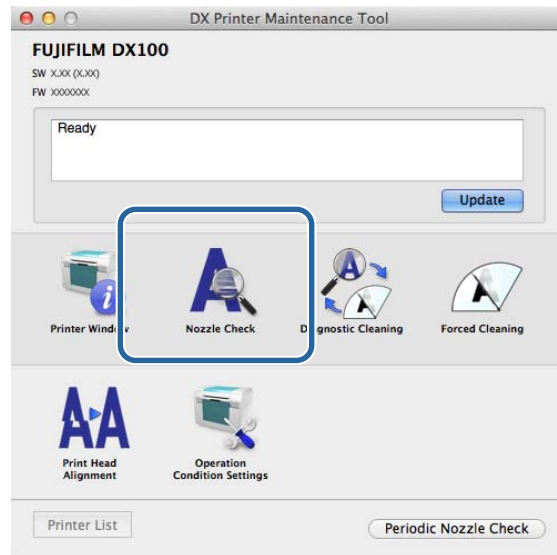

The **Nozzle Check** screen is displayed.

- 2 Click **Execute**.

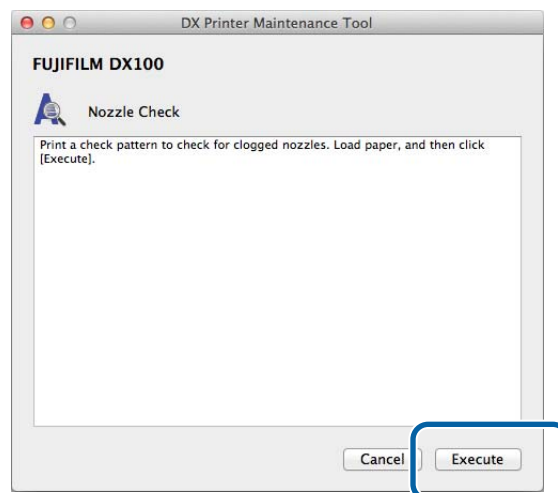


The check pattern is printed.

Using the Maintenance Tool (Mac OS X)**3**

Check the print results.


Good example

There are no gaps in the check pattern. There are no clogged nozzles.

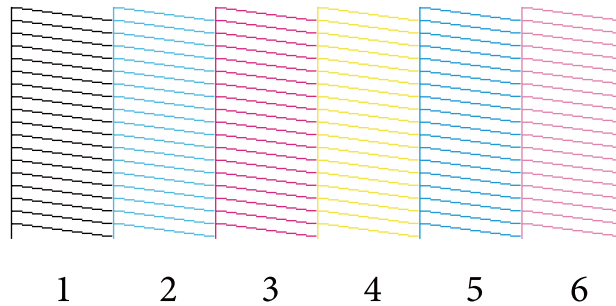

Bad example

There are gaps in the check pattern. Clogged nozzles detected. Perform cleaning.

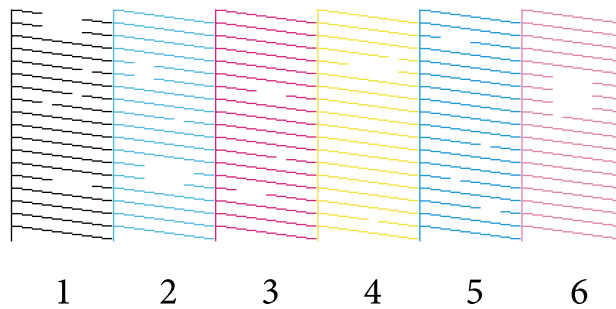


If there are gaps in the check pattern, you need to perform head cleaning.

 [“Forced Cleaning” on page 71](#)

Using the Maintenance Tool (Mac OS X)


Diagnostic Cleaning

- 1 Click **Diagnostic Cleaning** on the main screen.

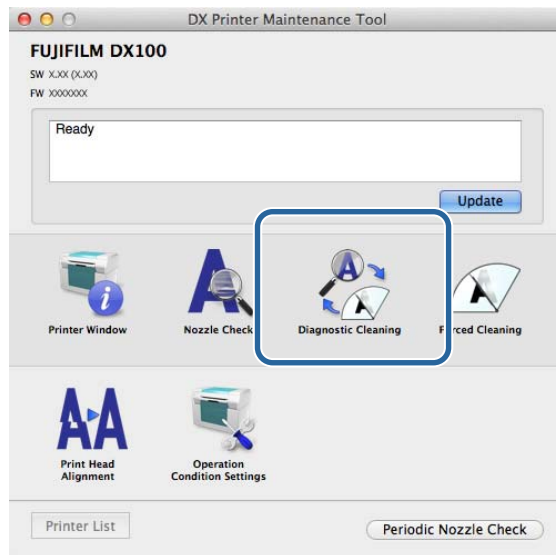

The **Diagnostic Cleaning** screen is displayed.

- 2 Click **Execute**.

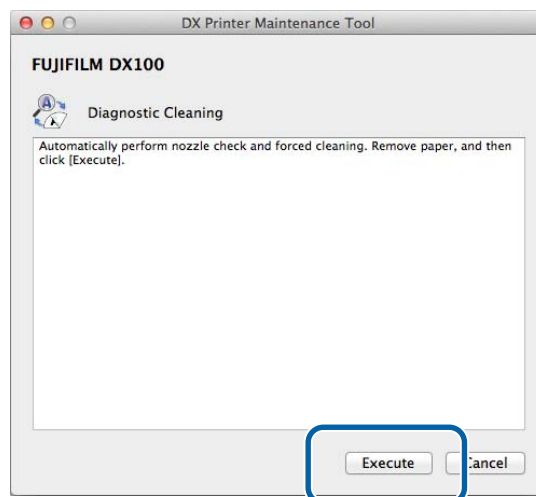

The nozzle check starts, and cleaning is performed if necessary.

This may take some time depending on the condition of the nozzles.

Using the Maintenance Tool (Mac OS X)

- 3 Check the message on the screen for the Diagnostic Cleaning results.

When "Diagnostic cleaning completed." is displayed, the procedure is complete.


When "Diagnostic cleaning is finished. Clogged nozzles detected. Perform diagnostic cleaning again. If the clogging is not cleared even after repeating diagnostic cleaning three times, execute [Power] from [Forced Cleaning]." is displayed, execute **Diagnostic Cleaning** again.

If nozzles are still clogged after repeating **Diagnostic Cleaning** three times, execute **Power** from Forced Cleaning. If nozzles are still clogged after executing **Power** cleaning, contact service support.

 ["Forced Cleaning" on page 71](#)

Forced Cleaning


- 1 Click **Forced Cleaning** on the main screen.

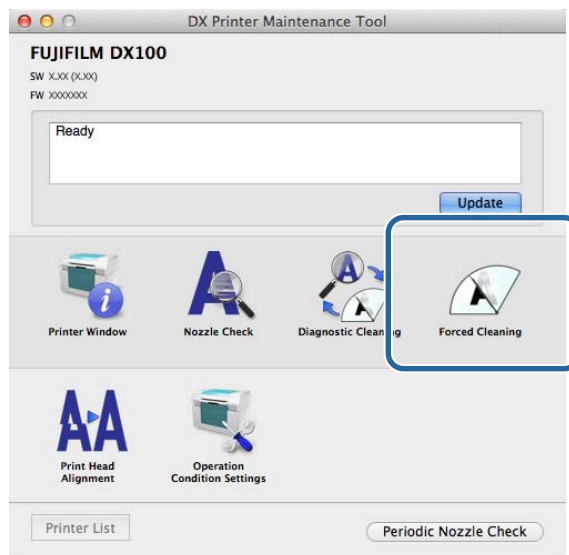

The **Forced Cleaning** screen is displayed.


Using the Maintenance Tool (Mac OS X)

2 Select the cleaning level.

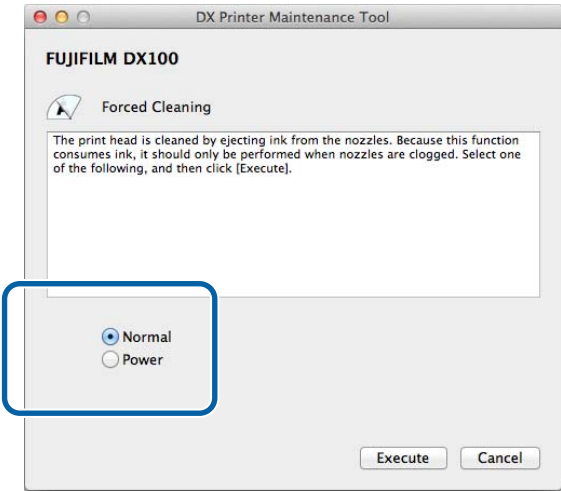

Item	Explanation
Normal	Cleans the surface of the head and clears clogged nozzles.
Power	Performs a stronger cleaning than Normal . Use this if nozzles are still clogged even after executing Normal cleaning several times. Power cleaning uses more ink than Normal cleaning. If a message is displayed informing you that ink is running low, replace the ink cartridge, and then perform cleaning.

3 Click **Execute**.

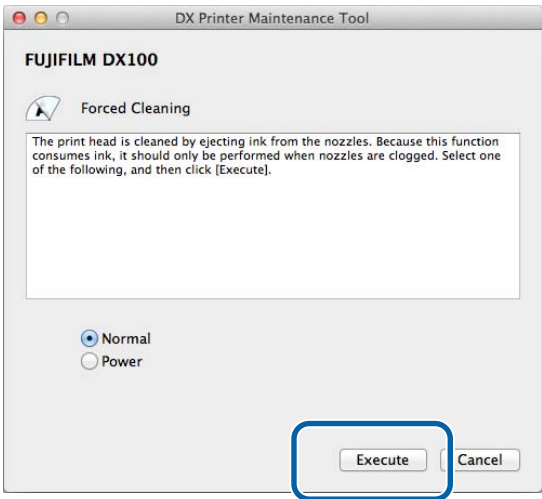

Cleaning is executed.

This may take some time depending on the cleaning level.

Using the Maintenance Tool (Mac OS X)

4

Check the results of the head cleaning.

Use **Nozzle Check** to check the status of the nozzles.

 [“Nozzle Check” on page 68](#)

If the nozzles are clogged, display the screen from step 2 and perform Normal cleaning. If nozzles are still clogged after repeating Normal several times, execute Power cleaning.


If nozzles are still clogged after executing Power cleaning, contact service support.

Using the Maintenance Tool (Mac OS X)

Print Head Alignment

If print quality declines due to prints appearing grainy or out of focus, perform Print Head Alignment. The Print Head Alignment function corrects print misalignments and paper feed amount.

- 1 Click **Print Head Alignment** on the main screen.

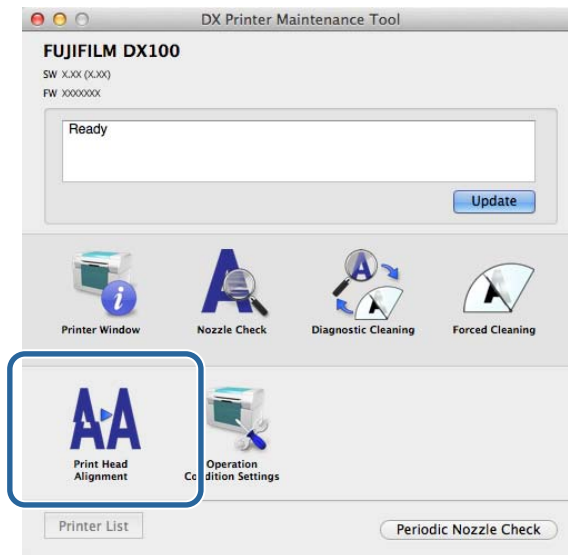


The **Print Head Alignment** screen is displayed.

- 2 Check that the paper type displayed matches the paper type for this printer, and then click **Print**.

If the paper type does not match, set the correct paper type in Paper Settings.

[“Paper Settings” on page 80](#)

To adjust paper feeding without performing Print Head Alignment, click **Skip** go to step 5.


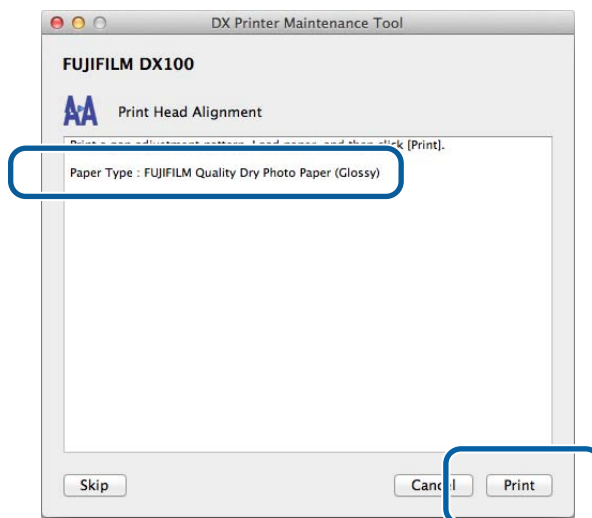


An adjustment pattern is printed.

Using the Maintenance Tool (Mac OS X)**3**

Check the print results.

Check the number of the pattern with the fewest gaps between nozzles.

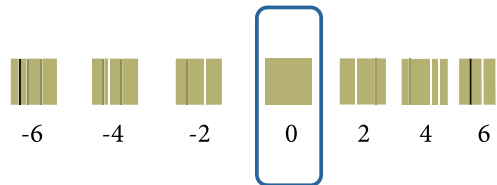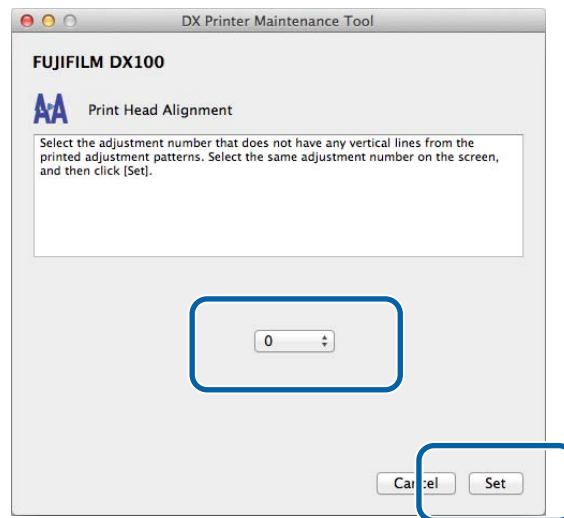**4**Select the pattern number, and then click **Set**.

The adjustment values are applied.


Next, the **Paper Feed Adjustment** screen is displayed.

Using the Maintenance Tool (Mac OS X)

- 5** Check that the printer's paper type and paper width match the paper type and paper width displayed, and then click **Print**.

If the paper type does not match, set the correct paper type in Paper Settings.


 [“Paper Settings” on page 80](#)

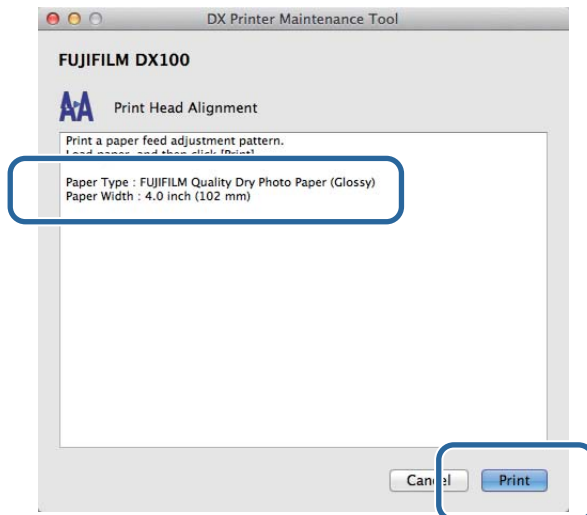

An adjustment pattern is printed.


- 6** Check the print results.

Check the number of the pattern with the fewest line.

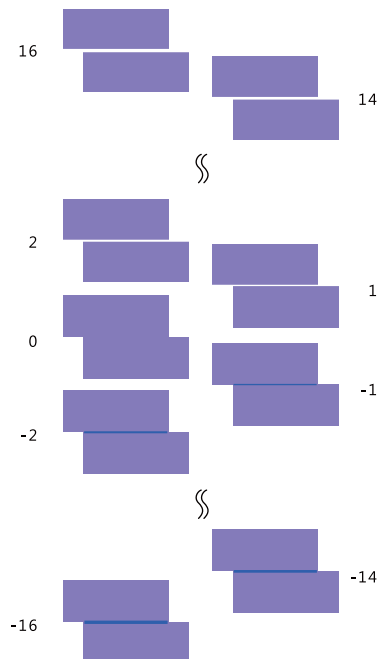


Using the Maintenance Tool (Mac OS X)

Refer to the following illustration and select an adjustment pattern without line.

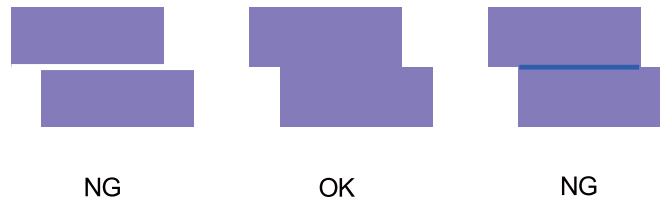

If there are no good patterns among the printed patterns, enter the number for a pattern that is nearly ok, and then reprint the adjustment pattern.

- 7** Select the pattern number, and then click **Set**.

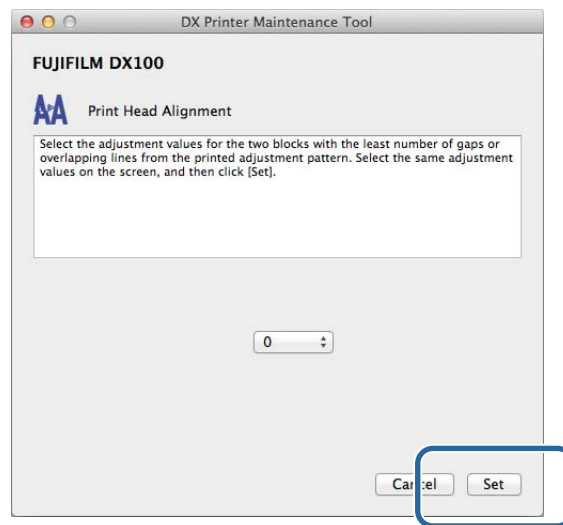

The adjustment values are applied.

Using the Maintenance Tool (Mac OS X)

Operation Condition Settings

In **Operation Condition Settings** you can perform various printer settings such as **Time Before Switching to Sleep Mode**, **Warning Buzzer**, and **Paper Settings**.




Time Before Switching to Sleep Mode

Set the time before switching to Sleep Mode.

The printer automatically switches to Sleep Mode when a print job has not been received for a while and no errors have occurred.

- 1 Click **Operation Condition Settings** on the main screen.

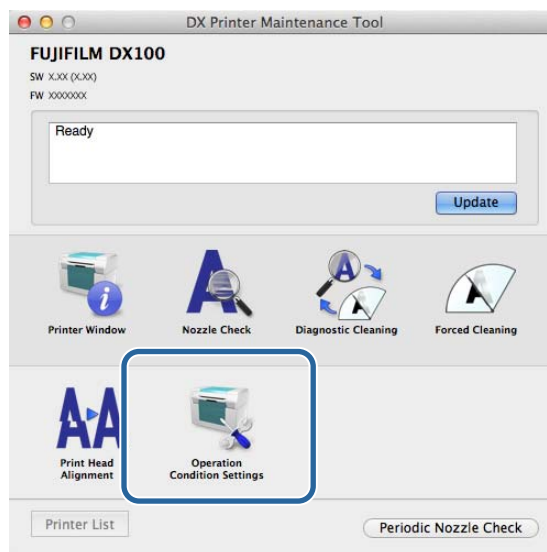


The **Operation Condition Settings** screen is displayed.

Using the Maintenance Tool (Mac OS X)

- 2 Select **Time Before Switching to Sleep Mode**, and then click **Set**.


When the set time has passed, the printer switches to Sleep Mode.
Settings: 5 mins., 10 mins., 15 mins., 30 mins., 1 hour, 2 hours

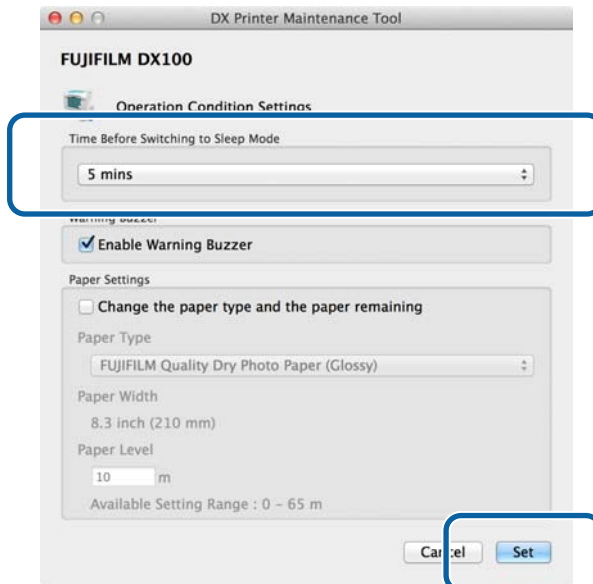

Warning Buzzer

Set whether or not to use the warning buzzer.

- 1 Click **Operation Condition Settings** on the main screen.

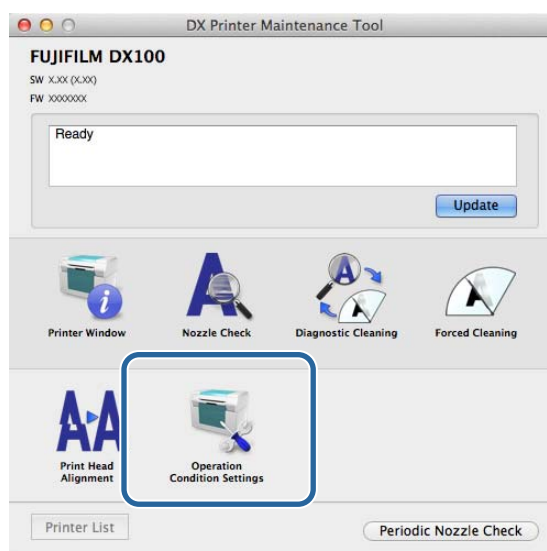


The **Operation Condition Settings** screen is displayed.

- 2 Select **Enable Warning Buzzer**, and then click **Set**.

Select to enable the warning buzzer.

Using the Maintenance Tool (Mac OS X)

Clear to disable the warning buzzer.

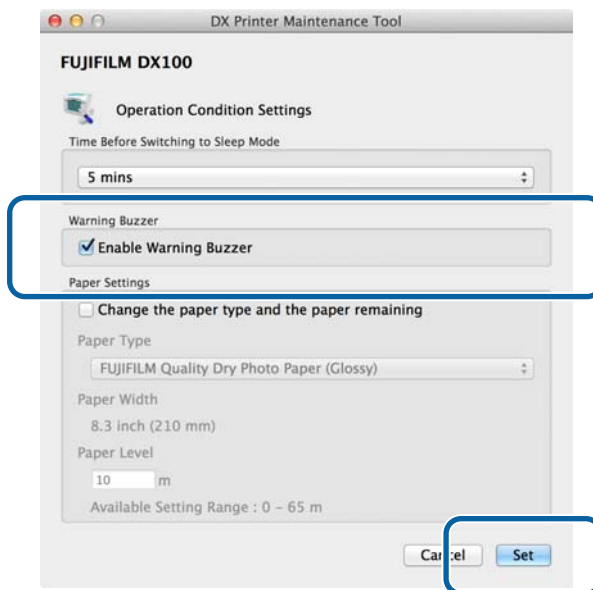


Paper Settings

In **Paper Settings**, you can set the **Paper Type** and **Paper Level**.

Set these after replacing the paper.

- 1 Click **Operation Condition Settings** on the main screen.

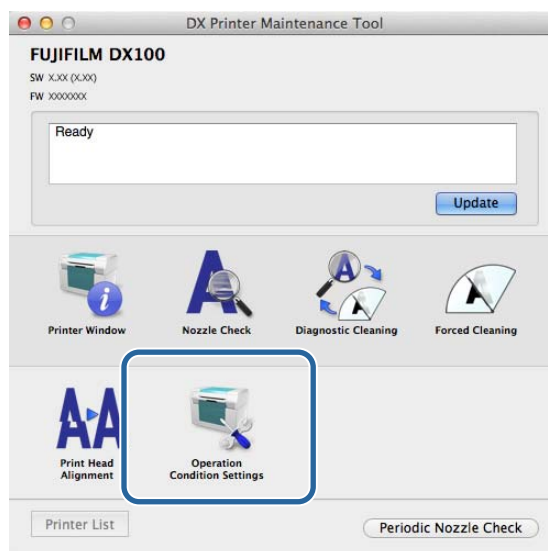


The **Operation Condition Settings** screen is displayed.

Using the Maintenance Tool (Mac OS X)


- 2** Select **Change the paper type and the paper remaining**.

When this is selected, you can change the **Paper Type** and **Paper Level**.

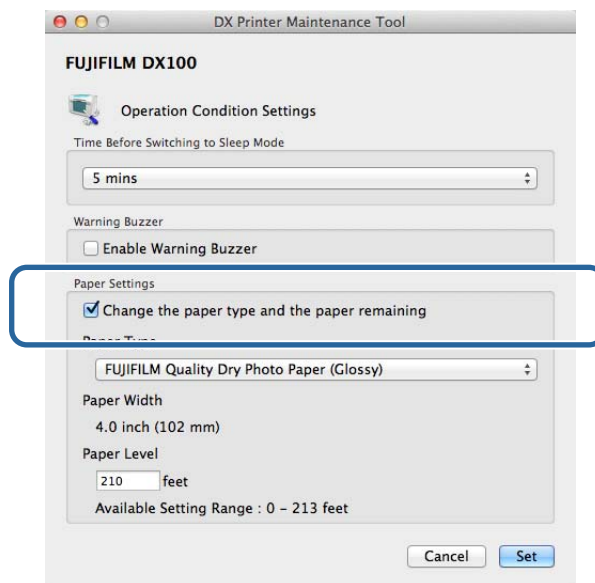

- 3** Set the **Paper Type** and the **Paper Level**, and then click **Set**.

Paper Width shows the paper width currently set.

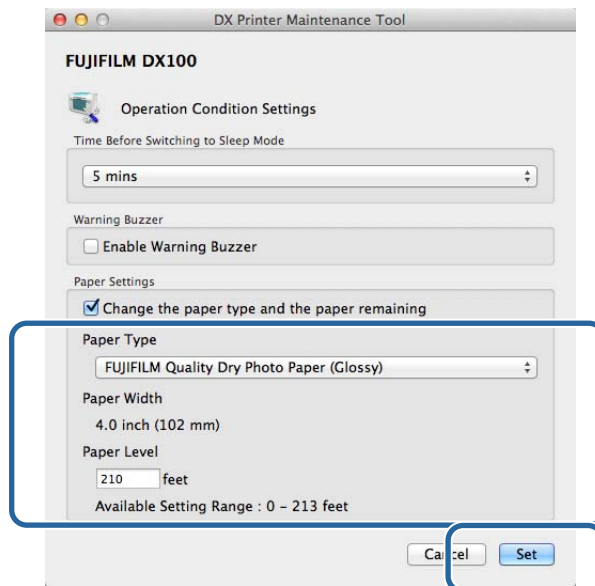


Using the Maintenance Tool (Mac OS X)

Periodic Nozzle Check

Set whether or not to automatically perform a Nozzle Check.

This should normally be enabled. Only disable this function if you are instructed to do so by a service engineer. If this is disabled, it is necessary to check the clogging status manually.

- 1 Click **Periodic Nozzle Check** on the main screen.

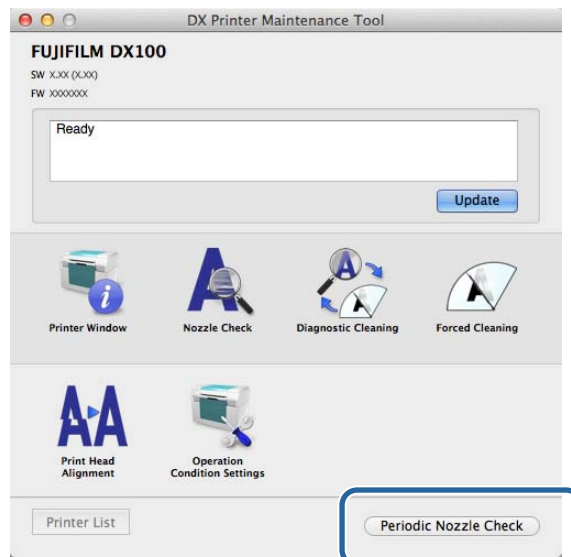


The **Periodic Nozzle Check** screen is displayed.

- 2 Select **Enable Periodic Check**, and then click **Set**.

When this is selected, a Nozzle Check is automatically performed at periodic intervals.

When this is cleared, a Nozzle Check is not automatically performed. Also, you cannot execute Diagnostic Cleaning.

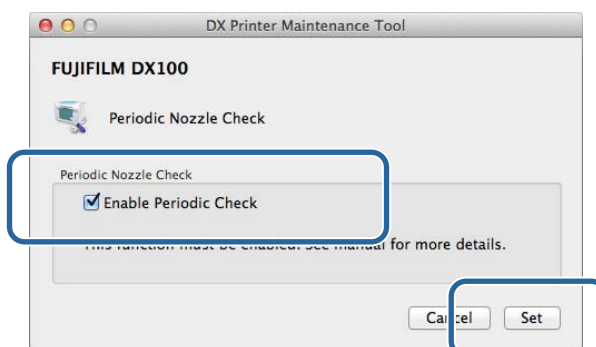

Using the Maintenance Tool (Mac OS X)

Adding a Printer/Updating Paper Information

You need to install the printer driver when performing the following operations.

- ❑ Adding a printer
- ❑ Updating paper information (Registering information for a paper type file to the printer)

- 1** Turn off the printer and then connect the printer to a computer with a USB cable.




- 2** Double-click DX Printer Setup.dmg.
- 3** When the screen is displayed, double-click **DX Printer Setup.app**.

Using the Maintenance Tool (Mac OS X)**4**

Follow the on-screen instructions to install.

When the following screen is displayed, click **Update the paper information - Select**, and then select the paper type file.

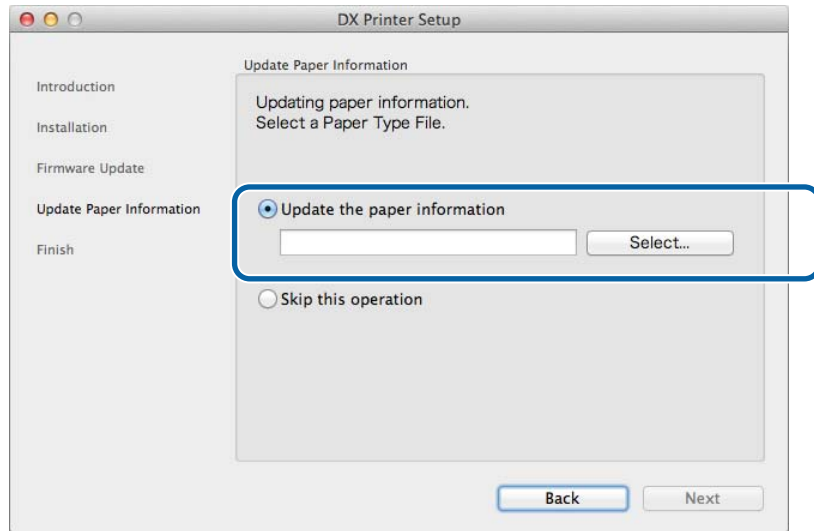**Note:**

Contact your local dealer for information on acquiring paper type files.

Using the Maintenance Tool (Mac OS X)


Troubleshooting

About error messages

When errors occur in the printer while printing, you can check the content of the error and solutions with the Maintenance Tool.


1

When an error occurs, click **Printer Window** on the main screen.

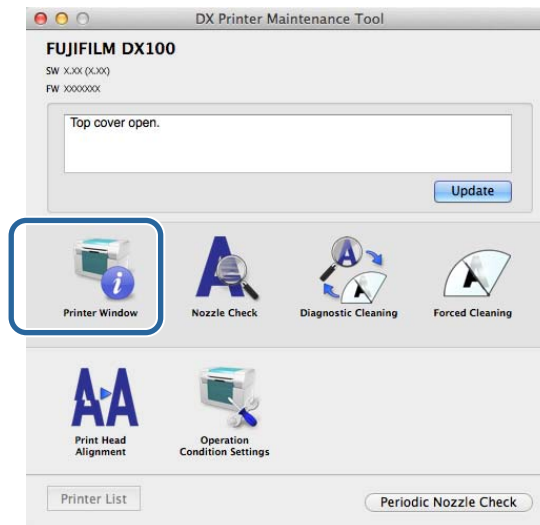

2

Check the solution on the screen and take the required action.

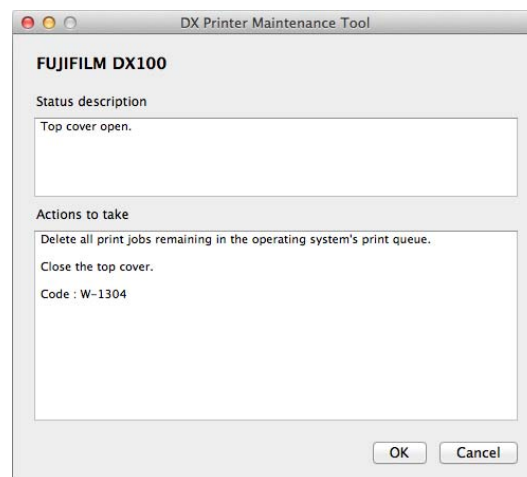

Note:

- ❑ See the "Operation Guide" for a list of error messages and solutions.
 🔗 "Operation Guide" - "Errors and Solutions"
- ❑ Click **Cancel** on the error screen to return to the main screen.

Appendix

Notes

- ❑ Unauthorized reproduction of a part or all of this manual is strictly prohibited.
- ❑ The contents of this manual are subject to change without prior notice.
- ❑ Contact our company if you have any questions, find a mistake, encounter a missing description, and so on in the contents of this manual.
- ❑ Regardless of the previous point, we will under no conditions be liable for any damages or losses resulting from operation of this product.
- ❑ We will under no conditions be liable for any damages or losses resulting from operation of this product in any way other than described in this manual, inappropriate use of this product, or repairs or modifications performed by a third party other than our company or our suppliers.
- ❑ We are unable to accept responsibility for any problems resulting from the use of options or consumable products other than our genuine products, or products that we recommend, even if the problem occurs within the warranty period. In this case, a fee will be required for any necessary repairs.

Appendix

OPEN SOURCE SOFTWARE

This printer product includes open source software programs. The list of open source software programs is as follows:

GNU LGPL

This printer product includes the open source software programs which apply the GNU Lesser General Public License Version 2 or later version ("LGPL Programs").

We provide the source code of the LGPL Programs until seven (7) years after the discontinuation of same model of this printer product. If you desire to receive the source code of the LGPL Programs, please contact the customer support of your region.

These LGPL Programs are WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

The list of LGPL Programs is as follows and the names of author are described in the source code of the LGPL Programs.

LGPL Programs

7za.exe 9.14

The GNU Lesser General Public License Version 2 is as follows. You also can see the GNU Lesser General Public License Version 2 at <http://www.gnu.org/licenses/>.

GNU LESSER GENERAL PUBLIC LICENSE

Version 2.1, February 1999

Copyright (C) 1991, 1999 Free Software Foundation, Inc.

51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

[This is the first released version of the Lesser GPL. It also counts as the successor of the GNU Library Public License, version 2, hence the version number 2.1.]

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public Licenses are intended to guarantee your freedom to share and change free software--to make sure the software is free for all its users.

This license, the Lesser General Public License, applies to some specially designated software packages--typically libraries--of the Free Software Foundation and other authors who decide to use it. You can use it too, but we suggest you first think carefully about whether this license or the ordinary General Public License is the better strategy to use in any particular case, based on the explanations below.

When we speak of free software, we are referring to freedom of use, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish); that you receive source code or can get it if you want it; that you can change the software and use pieces of it in new free programs; and that you are informed that you can do these things.

Appendix

To protect your rights, we need to make restrictions that forbid distributors to deny you these rights or to ask you to surrender these rights. These restrictions translate to certain responsibilities for you if you distribute copies of the library or if you modify it.

For example, if you distribute copies of the library, whether gratis or for a fee, you must give the recipients all the rights that we gave you. You must make sure that they, too, receive or can get the source code. If you link other code with the library, you must provide complete object files to the recipients, so that they can relink them with the library after making changes to the library and recompiling it. And you must show them these terms so they know their rights.

We protect your rights with a two-step method: (1) we copyright the library, and (2) we offer you this license, which gives you legal permission to copy, distribute and/or modify the library.

To protect each distributor, we want to make it very clear that there is no warranty for the free library. Also, if the library is modified by someone else and passed on, the recipients should know that what they have is not the original version, so that the original author's reputation will not be affected by problems that might be introduced by others.

Finally, software patents pose a constant threat to the existence of any free program. We wish to make sure that a company cannot effectively restrict the users of a free program by obtaining a restrictive license from a patent holder. Therefore, we insist that any patent license obtained for a version of the library must be consistent with the full freedom of use specified in this license.

Most GNU software, including some libraries, is covered by the ordinary GNU General Public License. This license, the GNU Lesser General Public License, applies to certain designated libraries, and is quite different from the ordinary General Public License. We use this license for certain libraries in order to permit linking those libraries into non-free programs.

When a program is linked with a library, whether statically or using a shared library, the combination of the two is legally speaking a combined work, a derivative of the original library. The ordinary General Public License therefore permits such linking only if the entire combination fits its criteria of freedom. The Lesser General Public License permits more lax criteria for linking other code with the library.

We call this license the "Lesser" General Public License because it does Less to protect the user's freedom than the ordinary General Public License. It also provides other free software developers Less of an advantage over competing non-free programs. These disadvantages are the reason we use the ordinary General Public License for many libraries. However, the Lesser license provides advantages in certain special circumstances.

For example, on rare occasions, there may be a special need to encourage the widest possible use of a certain library, so that it becomes a de-facto standard. To achieve this, non-free programs must be allowed to use the library. A more frequent case is that a free library does the same job as widely used non-free libraries. In this case, there is little to gain by limiting the free library to free software only, so we use the Lesser General Public License.

In other cases, permission to use a particular library in non-free programs enables a greater number of people to use a large body of free software. For example, permission to use the GNU C Library in non-free programs enables many more people to use the whole GNU operating system, as well as its variant, the GNU/Linux operating system.

Although the Lesser General Public License is Less protective of the users' freedom, it does ensure that the user of a program that is linked with the Library has the freedom and the wherewithal to run that program using a modified version of the Library.

The precise terms and conditions for copying, distribution and modification follow. Pay close attention to the difference between a "work based on the library" and a "work that uses the library". The former contains code derived from the library, whereas the latter must be combined with the library in order to run.

GNU LESSER GENERAL PUBLIC LICENSE

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

Appendix

0. This License Agreement applies to any software library or other program which contains a notice placed by the copyright holder or other authorized party saying it may be distributed under the terms of this Lesser General Public License (also called "this License"). Each licensee is addressed as "you".

A "library" means a collection of software functions and/or data prepared so as to be conveniently linked with application programs (which use some of those functions and data) to form executables.

The "Library", below, refers to any such software library or work which has been distributed under these terms. A "work based on the Library" means either the Library or any derivative work under copyright law: that is to say, a work containing the Library or a portion of it, either verbatim or with modifications and/or translated straightforwardly into another language. (Hereinafter, translation is included without limitation in the term "modification".)

"Source code" for a work means the preferred form of the work for making modifications to it. For a library, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the library.

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running a program using the Library is not restricted, and output from such a program is covered only if its contents constitute a work based on the Library (independent of the use of the Library in a tool for writing it). Whether that is true depends on what the Library does and what the program that uses the Library does.

1. You may copy and distribute verbatim copies of the Library's complete source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and distribute a copy of this License along with the Library.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Library or any portion of it, thus forming a work based on the Library, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

- a) The modified work must itself be a software library.
- b) You must cause the files modified to carry prominent notices stating that you changed the files and the date of any change.
- c) You must cause the whole of the work to be licensed at no charge to all third parties under the terms of this License.
- d) If a facility in the modified Library refers to a function or a table of data to be supplied by an application program that uses the facility, other than as an argument passed when the facility is invoked, then you must make a good faith effort to ensure that, in the event an application does not supply such function or table, the facility still operates, and performs whatever part of its purpose remains meaningful.

(For example, a function in a library to compute square roots has a purpose that is entirely well-defined independent of the application. Therefore, Subsection 2d requires that any application-supplied function or table used by this function must be optional: if the application does not supply it, the square root function must still compute square roots.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Library, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Library, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Appendix

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Library. In addition, mere aggregation of another work not based on the Library with the Library (or with a work based on the Library) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may opt to apply the terms of the ordinary GNU General Public License instead of this License to a given copy of the Library. To do this, you must alter all the notices that refer to this License, so that they refer to the ordinary GNU General Public License, version 2, instead of to this License. (If a newer version than version 2 of the ordinary GNU General Public License has appeared, then you can specify that version instead if you wish.) Do not make any other change in these notices.

Once this change is made in a given copy, it is irreversible for that copy, so the ordinary GNU General Public License applies to all subsequent copies and derivative works made from that copy.

This option is useful when you wish to copy part of the code of the Library into a program that is not a library.

4. You may copy and distribute the Library (or a portion or derivative of it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange.

If distribution of object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place satisfies the requirement to distribute the source code, even though third parties are not compelled to copy the source along with the object code.

5. A program that contains no derivative of any portion of the Library, but is designed to work with the Library by being compiled or linked with it, is called a "work that uses the Library". Such a work, in isolation, is not a derivative work of the Library, and therefore falls outside the scope of this License.

However, linking a "work that uses the Library" with the Library creates an executable that is a derivative of the Library (because it contains portions of the Library), rather than a "work that uses the library". The executable is therefore covered by this License. Section 6 states terms for distribution of such executables.

When a "work that uses the Library" uses material from a header file that is part of the Library, the object code for the work may be a derivative work of the Library even though the source code is not.

Whether this is true is especially significant if the work can be linked without the Library, or if the work is itself a library. The threshold for this to be true is not precisely defined by law.

If such an object file uses only numerical parameters, data structure layouts and accessors, and small macros and small inline functions (ten lines or less in length), then the use of the object file is unrestricted, regardless of whether it is legally a derivative work. (Executables containing this object code plus portions of the Library will still fall under Section 6.)

Otherwise, if the work is a derivative of the Library, you may distribute the object code for the work under the terms of Section 6. Any executables containing that work also fall under Section 6, whether or not they are linked directly with the Library itself.

6. As an exception to the Sections above, you may also combine or link a "work that uses the Library" with the Library to produce a work containing portions of the Library, and distribute that work under terms of your choice, provided that the terms permit modification of the work for the customer's own use and reverse engineering for debugging such modifications.

Appendix

You must give prominent notice with each copy of the work that the Library is used in it and that the Library and its use are covered by this License. You must supply a copy of this License. If the work during execution displays copyright notices, you must include the copyright notice for the Library among them, as well as a reference directing the user to the copy of this License. Also, you must do one of these things:

- a) Accompany the work with the complete corresponding machine-readable source code for the Library including whatever changes were used in the work (which must be distributed under Sections 1 and 2 above); and, if the work is an executable linked with the Library, with the complete machine-readable "work that uses the Library", as object code and/or source code, so that the user can modify the Library and then relink to produce a modified executable containing the modified Library. (It is understood that the user who changes the contents of definitions files in the Library will not necessarily be able to recompile the application to use the modified definitions.)
- b) Use a suitable shared library mechanism for linking with the Library. A suitable mechanism is one that (1) uses at run time a copy of the library already present on the user's computer system, rather than copying library functions into the executable, and (2) will operate properly with a modified version of the library, if the user installs one, as long as the modified version is interface-compatible with the version that the work was made with.
- c) Accompany the work with a written offer, valid for at least three years, to give the same user the materials specified in Subsection 6a, above, for a charge no more than the cost of performing this distribution.
- d) If distribution of the work is made by offering access to copy from a designated place, offer equivalent access to copy the above specified materials from the same place.
- e) Verify that the user has already received a copy of these materials or that you have already sent this user a copy.

For an executable, the required form of the "work that uses the Library" must include any data and utility programs needed for reproducing the executable from it. However, as a special exception, the materials to be distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

It may happen that this requirement contradicts the license restrictions of other proprietary libraries that do not normally accompany the operating system. Such a contradiction means you cannot use both them and the Library together in an executable that you distribute.

7. You may place library facilities that are a work based on the Library side-by-side in a single library together with other library facilities not covered by this License, and distribute such a combined library, provided that the separate distribution of the work based on the Library and of the other library facilities is otherwise permitted, and provided that you do these two things:

- a) Accompany the combined library with a copy of the same work based on the Library, uncombined with any other library facilities. This must be distributed under the terms of the Sections above.
- b) Give prominent notice with the combined library of the fact that part of it is a work based on the Library, and explaining where to find the accompanying uncombined form of the same work.

8. You may not copy, modify, sublicense, link with, or distribute the Library except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense, link with, or distribute the Library is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

9. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Library or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Library (or any work based on the Library), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Library or works based on it.

Appendix

10. Each time you redistribute the Library (or any work based on the Library), the recipient automatically receives a license from the original licensor to copy, distribute, link with or modify the Library subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties with this License.

11. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Library at all. For example, if a patent license would not permit royalty-free redistribution of the Library by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Library.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply, and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

12. If the distribution and/or use of the Library is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Library under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

13. The Free Software Foundation may publish revised and/or new versions of the Lesser General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Library specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Library does not specify a license version number, you may choose any version ever published by the Free Software Foundation.

14. If you wish to incorporate parts of the Library into other free programs whose distribution conditions are incompatible with these, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

15. BECAUSE THE LIBRARY IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE LIBRARY, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE LIBRARY "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE LIBRARY IS WITH YOU. SHOULD THE LIBRARY PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

Appendix

16. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE LIBRARY AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE LIBRARY (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE LIBRARY TO OPERATE WITH ANY OTHER SOFTWARE), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS

How to Apply These Terms to Your New Libraries

If you develop a new library, and you want it to be of the greatest possible use to the public, we recommend making it free software that everyone can redistribute and change. You can do so by permitting redistribution under these terms (or, alternatively, under the terms of the ordinary General Public License).

To apply these terms, attach the following notices to the library. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the "copyright" line and a pointer to where the full notice is found.

<one line to give the library's name and a brief idea of what it does.>

Copyright (C) <year> <name of author>

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2.1 of the License, or (at your option) any later version.

This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software

Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA

Also add information on how to contact you by electronic and paper mail.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a "copyright disclaimer" for the library, if necessary. Here is a sample; alter the names:

Yoyodyne, Inc., hereby disclaims all copyright interest in the library 'Frob' (a library for tweaking knobs) written by James Random Hacker.

<signature of Ty Coon>, 1 April 1990
Ty Coon, President of Vice

That's all there is to it!

7-Zip Command line version

~~~~~

License for use and distribution

~~~~~

7-Zip Copyright (C) 1999-2010 Igor Pavlov.

Appendix

7za.exe is distributed under the GNU LGPL license

Notes:

You can use 7-Zip on any computer, including a computer in a commercial organization. You don't need to register or pay for 7-Zip.

GNU LGPL information

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2.1 of the License, or (at your option) any later version.

This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You can receive a copy of the GNU Lesser General Public License from <http://www.gnu.org/>

END-USER LICENSE AGREEMENT

END-USER LICENSE AGREEMENT

IMPORTANT-READ CAREFULLY:

This is a legally binding agreement (“License”) entered into between you and FUJIFILM Corporation (“FUJIFILM”). Before turning on the power supply of Frontier-S (“Product”) for the first time or installing “Main System Software” (hereinafter referred to as “System”), please read the terms and conditions of this License very carefully. By turning on the power supply of the Product or installing the System, you are deemed to the terms of this License. If you cannot agree to such terms, please return the System to the supplier and present your receipt for a full refund of amount paid by you with respect thereto. In order to avoid controversies which may arise between the dealer and you on handling of return, it is recommended for you to confirm the issue with the Product returns provision of the Agreement entered into at the time of purchase.

In the event that you accept an updated version of the System which may be supplied by FUJIFILM to you in the future, it is agreed that this License shall automatically apply to the updated version of the System.

1 PERMITTED USES

- 1.1 You may use the System contained in the memory device on a single Product and on other products approved by FUJIFILM.
- 1.2 The Product has connectivity with FUJIFILM designated scanners and no other scanners.

2 COPYRIGHT

- 2.1 All rights in and to the data and programs contained on or in the System and the accompanying manuals are and shall remain the exclusive property of FUJIFILM or its licensor and the data, programs and the accompanying manuals are protected by relevant domestic laws of Japan as well as international treaties.
- 2.2 The title to and the ownership of the media on which the System is stored as well as the accompanying manuals shall be retained by FUJIFILM and shall not in any event be transferred or assigned to you.
- 2.3 You may use the System for both business use and personal use.

3 RESTRICTIONS

- 3.1 You are not authorized to make any other copies whatever of the System, whatever for back-up purposes or otherwise.
- 3.2 You may not rent or lease the System.
- 3.3 You may not transfer, sell, sublicense, offer for secondhand sale, distribute or lend the System by copying the System.
- 3.4 You may not copy, modify, adapt, translate, distribute, reverse-engineer, reverse-assemble, or decompile the System.
- 3.5 You may not alter, remove or obscure copyright notice or any other proprietary legends contained in or on the System.

4 WARRANTY

- 4.1 Should the media in which the System is stored prove physically defective, FUJIFILM shall replace the System at no cost to you.
- 4.2 The warranties under this License expire one(1) year after the date of shipment of the System from Japan.
- 4.3 FUJIFILM MAKES NO WARRANTY TO YOU, EITHER EXPRESSED OR IMPLIED, AS TO MERCHANTABILITY AND/OR THE FITNESS OF THE FUNCTIONS OF THE SYSTEM TO YOUR PARTICULAR PURPOSE.

5 LIMITATION OF LIABILITY

- 5.1 FUJIFILM’s liability, if any, in respect of any and all direct, indirect or consequential damage to you or any third party arising from use of or inability to use the System shall in any event not exceed the amount paid by you with respect to the System at the time of supply.
- 5.2 FUJIFILM makes no warranties of noninfringement of intellectual property rights such as patents or copyrights of the third party by your use of the System.

6 MISCELLANEOUS

This License shall be governed by the laws of Japan.



FUJIFILM Corporation
7-3, Akasaka 9-chome, Minato-ku, Tokyo 107-0052, Japan

Index**Index****A**

Adjusting the print head.....	66
Auto Nozzle Check.....	12

C

Collect Logs.....	46
Color Balance.....	29

D

Density.....	33
Diagnostic Cleaning.....	7, 9, 66, 70

E

Error message.....	59, 85
--------------------	--------

F

Forced Cleaning.....	7, 10, 66, 71
----------------------	---------------

G

Gap Adjustment.....	74
Gradation.....	38
Gray Adjustment.....	27

H

Head Maintenance.....	7
History.....	45

M

Maintenance Tool.....	62
Maintenance tool.....	4

N

Nozzle Check.....	7, 12, 66, 68
-------------------	---------------

O

Operation Condition Settings.....	17, 78
Operation History.....	45

P

Paper Feed Adjustment.....	24
Paper Settings.....	16, 80
Power Saving.....	18
Print Check Pattern.....	14
Print Head Alignment.....	22
Printer Adjustment.....	22
Printer Management.....	48

R

Register/Delete Printer.....	48
Replace Printer.....	49

S

Spool Folder Settings.....	54
----------------------------	----

T

Time Before Switching to Sleep Mode.....	78
--	----

U

Update Paper Information.....	56
-------------------------------	----

W

Warning Buzzer.....	17, 79
---------------------	--------



FUJIFILM Corporation

Midtown West, 7-3, Akasaka 9-chome, Minato-ku, Tokyo 107-0052, Japan

in North America	FUJIFILM North America Corporation 200 Summit Lake Drive, Valhalla NY 10595-1356, U.S.A.
	FUJIFILM CANADA INC. 600 Suffolk Court, Mississauga, Ontario, L5R 4G4, Canada
	FUJIFILM HAWAII, INC. 94-468 Akoki Street, Waipahu, Hawaii 96797, U.S.A.
in Europe	FUJIFILM EUROPE G.m.b.H. Heesenstrasse 31, 40549 Dusseldorf, Germany
	FUJIFILM UK LTD. St. Martins Business Centre St. Martins Way Bedford MK42 0LF U.K.
	FUJIFILM ESPAÑA, S.A. Aragon, 180, 08011-Barcelona, Spain
	FUJIFILM FRANCE S.A.S. 16, Rue Etienne Jules Marey, 78391 Bois d' Arcy, Franc
in Central America	FUJIFILM CORPORATION MEXICO OFFICE Av. Ejercito Nacional 351, 5 piso, Col. Granada, 11520 Mexico D.F., Mexico
in South America	FUJIFILM DO BRASIL LTDA. Avenida Vereador Jose Diniz 3400, Campo Belo, São Paulo- CEP, Brazil - SP 04604-901, Brazil
in Asia	FUJIFILM (SINGAPORE) PTE. LTD. 10 New Industrial Road, Fujifilm Building, Singapore 536201
	FUJIFILM (THAILAND) LTD. S.P. Building, 8th Floor, 388 Phaholyothin Road, Bangkok 10400, Thailand
	FUJIFILM (MALAYSIA) SDN. BHD. NO.22 Jalan Jurunilai U1/20 Seksyen U1 Hicom Glenmarie Industrial Park 40150 Shan Alam Selangor, Malaysia
	FUJIFILM INDIA PRIVATE LIMITED 6th Floor, Universal Trade Tower, Gurgaon-Sohna Road, Sector 49, Gurgaon-122101, Haryana, India
in Oceania	FUJIFILM AUSTRALIA PTY LTD. 114 Old Pittwater Road, Brookvale, N.S.W. 2100, Australia
	FUJIFILM NZ LTD. Cnr William Pickering Drive & Bush Road, Albany, Auckland, New Zealand
in the Middle East	FUJIFILM CORPORATION DUBAI OFFICE R/A 08 HB 03, PO Box 17212, Jebel Ali Free Zone, Dubai, U.A.E.
in South Africa	FUJIFILM CORPORATION JOHANNESBURG OFFICE 9th Floor, Sandton City Office Towers, Cnr Rivonia Road & 5th Street, Sandton 2196, South Africa